


HP 92068A RTE-IVB

Index to Operating System Manuals

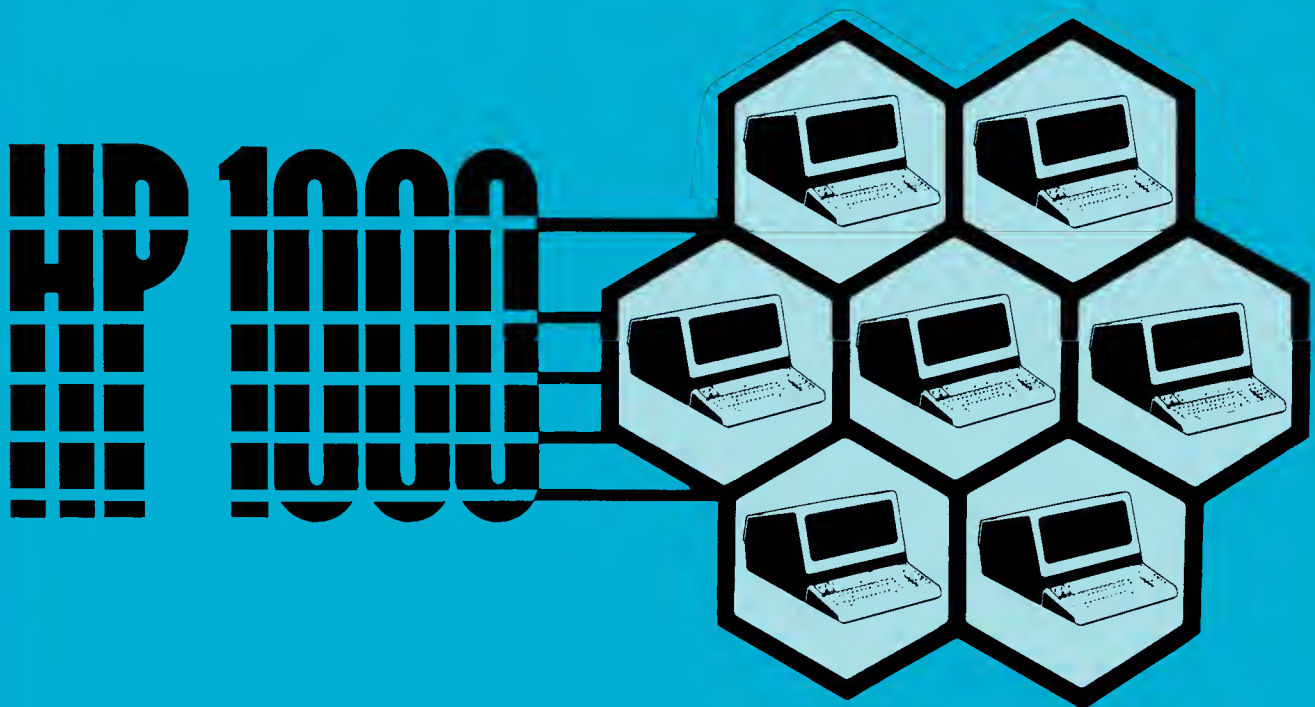

HP 92068A RTE-IVB

Index to Operating System Manual



PRINTING HISTORY

The Printing History below identifies the Edition of this Manual and any Updates that are included. Periodically, Update packages are distributed which contain replacement pages to be merged into the manual, including an updated copy of this Printing History page. Also, the update may contain write-in instructions.

Each reprinting of this manual will incorporate all past Updates, however, no new information will be added. Thus, the reprinted copy will be identical in content to prior printings of the same edition with its user-inserted update information. New editions of this manual will contain new information, as well as all Updates.

To determine what manual edition and update is compatible with your current software revision code, refer to the appropriate Software Numbering Catalog, Software Product Catalog, or Diagnostic Configurator Manual.

First Edition July 1981

NOTICE


The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another program language without the prior written consent of Hewlett-Packard Company.

RTE-IVB OPERATING SYSTEM DOCUMENTATION MAP

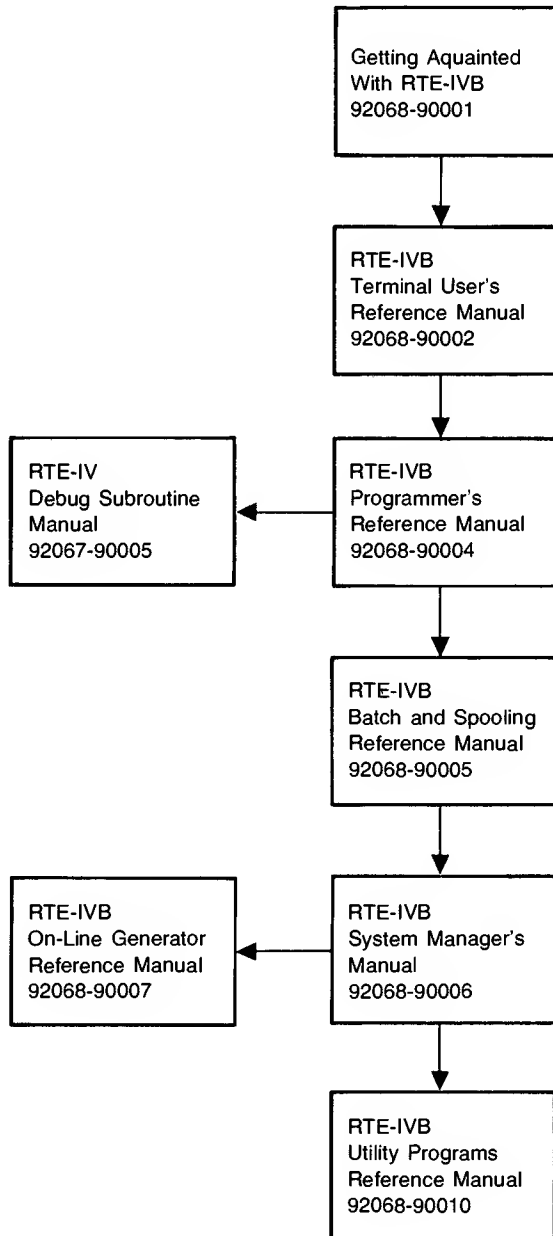

Preface

This document provides a master index for the HP92068A RTE-IVB Operating System Manuals. In addition, a listing of the User and Reference Manuals with a brief description of their contents is provided. Each entry of the index contains a mnemonic that is a pointer to the particular manual containing the topic of that entry. Following the manual descriptions is a list of the manual titles, part numbers, and mnemonics used in this index.

GETTING ACQUAINTED WITH RTE-IVB, part no. 92068-90001

This manual is an introduction to the RTE-IVB Operating System (HP 92068A) with Session Monitor. It illustrates the ease with which you can do the following:

- * Communicate with the system
- * Create and Modify Files
- * Develop and Run Programs
- * Execute system commands (or run programs) from a procedure file.

This manual should be used as a tutorial guide for the first time user.

RTE-IVB TERMINAL USER'S REFERENCE MANUAL, part no. 92068-90002

This manual describes the scope, format, and utility programs available with the RTE-IVB operating system. It is intended to be the primary reference source for operators who will be using the computer data entry, file manipulation, program development, and other interactive tasks.

RTE-IVB PROGRAMMER'S REFERENCE MANUAL, part no. 92068-90004

Describes the features provided by the RTE-IVB operating system that allow the user to programmatically use system services and/or control system resources. Detailed descriptions of the calling sequences which invoke system action. Also, FORTRAN-IV and Assembly Language examples are provided.

RTE-IVB BATCH AND SPOOLING REFERENCE MANUAL, part no. 92068-90005

Describes the uses and requirements of the Batch Spool Monitor Subsystem for those who wish to use the batch processing and spooling features.

Preface (Continued)

RTE-IV DEBUG SUBROUTINE MANUAL, part no. 92067-90006

DBUGR is a utility program for debugging programs run on HP 1000 series computers.

RTE-IVB SYSTEM MANAGERS MANUAL, part no. 92068-90006

Describes planning, generating, and maintaining a system. In conjunction with the RTE-IVB On-Line Generator Reference Manual, all system generation information is available.

RTE-IVB ON-LINE GENERATOR REFERENCE MANUAL, part no. 92068-90007

Describes detailed procedures for generating a new RTE-IVB Operating System without shutting down the existing RTE-IVB system. Complete examples of each phase and heavily annotated worksheets are provided. The manual is primarily intended for System Managers and System Programmers who are involved in the design and maintenance of total system configurations.

RTE-IVB UTILITY PROGRAMS REFERENCE MANUALS, part no. 92068-90010

Describes the utility programs available as part of the RTE-IVB operating system. It includes programs to save data from disc to magnetic tape, from magnetic tape to disc, to initialize or format a disc, and to replace disc files with files stored on mini-cartridge tape.

List of manuals, part numbers, mnemonics used in this index

PART NO.	TITLE	MNEMONIC
92068-90001	Getting Acquainted with RTE-IVB	GTAQ
92068-90002	RTE-IVB Terminal Users Reference Manual	TERM
92068-90004	RTE-IVB Programmer's Reference Manual	PROG
92067-90005	RTE-IV Debug Subroutine Manual	DEBUG
92068-90005	RTE-IVB Batch and Spooling Reference Manual	BHSP
92068-90006	RTE-IVB System Manager's Manual	SMGR
92068-90007	RTE-IVB On-Line Generator Reference Manual	OGEN
92068-90010	RTE-IVB Utility Programs Reference Manual	UTIL

Special Symbols

TOPIC	PAGE/PARA. NO.
!! (abort) command.....	OGEN 1-2,2-6
# Command.....	TERM 5-18
# OF BLANK ID EXTENSIONS?.....	OGEN 2-72,3-15
# OF BLANK ID SEGMENTS?.....	OGEN 3-14
# OF BLANK LONG ID SEGMENTS?.....	OGEN 2-70
# OF BLANK SHORT ID SEGMENTS?.....	OGEN 2-72,3-15
# OF I/O CLASSES?.....	OGEN 2-69
# OF I/O CLASSES?.....	OGEN 3-14
# OF LU MAPPINGS.....	OGEN 2-69
# OF LU MAPPINGS?.....	OGEN 3-14
# OF RESOURCE NUMBERS?.....	OGEN 2-69,3-14
\$CLAS, system class table.....	OGEN 2-69
\$CNFG, reconfigurator module.....	OGEN B-6
\$CVT3(CNUMD,CNUMO) \$CVT1(KCVT) - Binary to ASCII conv.subroutine.....	PROG 6-18
\$LIBR.....	PROG 6-2
\$LIBX.....	PROG 6-2
\$LUSW, Batch Switch Table.....	OGEN 2-69
\$MATA, partition definition table.....	OGEN 2-73
\$POWR.....	PROG C-12
\$RNTB, system resource table.....	OGEN 2-70
* (comment) command.....	OGEN 2-6
** Command.....	TERM 3-31,3-126
+ Command.....	TERM 5-28
- Command.....	TERM 5-45
.DRCT - indirect address subroutine.....	PROG 6-22
.EMAP subroutine.....	PROG 5-7
.EMIO subroutine.....	PROG 5-11
.ERES subroutine.....	PROG 5-10
/ Command.....	TERM 5-28
12821A system disc interface.....	OGEN 2-15
13037B/C system disc controller.....	OGEN 2-15
7900 Disc Backup Programs.....	UTIL 4-1
9885 Flexible Disc Backup Utility.....	UTIL 6-1
= Command.....	TERM 5-20
?? Command.....	TERM 3-30
^ Command.....	TERM 5-36

A

A Command.....	TERM 5-81
A-Register.....	TERM 6-35
AB - Abort Job.....	BHSP 2-30,4-9
AB Command.....	TERM 2-11,4-15
AB Command.....	BHSP 2-30
ABEND Operator Error Message.....	BHSP 2-30
abort (!!) command.....	OGEN 1-2,2-7

RTE-IVB INDEX

Abort Current Edit Session.....	TERM 5-81
Abort Currently Executing Batch Job with MTM.....	TERM 2-13
Abort Currently Executing Batch Job with Session Monitor.....	TERM 2-11
ABREG.....	PROG 2-7
Absolute Code.....	TERM 3-7
Absolute Load Module.....	TERM 6-5
Absolute Record Formats.....	TERM C-9
Absolute Tape Format.....	TERM C-15
Absolute tape format.....	PROG D-8
Absolute time scheduling.....	PROG 2-32
AC Command.....	TERM 3-16,3-32
Accessing Cartridges.....	GTAQ 2-3
Accessing Devices.....	GTAQ 2-3
Account Command File Formats.....	SMGR 7-36
Account Directory.....	SMGR 7-4
Account File Components.....	SMGR 7-1
Account File Header.....	SMGR 7-1
Account File.....	TERM 2-1,2-8
Account file.....	PROG 1-16
Account File.....	SMGR 2-5,7-1
Account Linking.....	TERM 3-39
Account Linking.....	SMGR 2-3
Account Planning Criteria.....	SMGR 2-6,2-7
Account Planning Matrix.....	SMGR 2-1,2-8,6-2
Account SST.....	SMGR 6-1,6-13,6-19,7-5,7-16,7-18,7-20,7-21
Account Structure Planning.....	SMGR 2-6
Account Structure.....	SMGR 2-3
Account System Initialization.....	SMGR 6-5
Account System.....	SMGR 2-5
Accounts Program Operation.....	SMGR 7-6
ACCTS Command Summary.....	SMGR 7-9
ACCTS Command System.....	SMGR 7-10
ACCTS Commands:	
ACCTS commands: ABORT.....	SMGR 7-14
ACCTS commands: ALTER,ACCT.....	SMGR 7-30
ACCTS commands: ALTER,GROUP.....	SMGR 7-19
ACCTS commands: ALTER,USER.....	SMGR 7-20
ACCTS commands: EXIT.....	SMGR 7-14
ACCTS commands: HELP.....	SMGR 7-10
ACCTS commands: LIST,ACCT.....	SMGR 7-24
ACCTS commands: LIST,GROUP.....	SMGR 7-24
ACCTS commands: LIST,USER.....	SMGR 7-24
ACCTS commands: LOAD.....	SMGR 7-34
ACCTS commands: NEW,GROUP.....	SMGR 7-15
ACCTS commands: NEW,USER.....	SMGR 7-16
ACCTS commands: PURGE,ACCT.....	SMGR 7-31
ACCTS commands: PURGE,GROUP.....	SMGR 7-26
ACCTS commands: PURGE,USER.....	SMGR 7-26
ACCTS commands: RESET,GROUP.....	SMGR 7-22
ACCTS commands: RESET,USER.....	SMGR 7-22
ACCTS commands: SD,0.....	SMGR 7-27
ACCTS commands: SD,SESSION.....	SMGR 7-27
ACCTS commands: SD.....	SMGR 7-28

ACCTS commands: SU..... SMGR 7-30
 ACCTS commands: TELL..... SMGR 7-11
 ACCTS commands: TRANSFER..... SMGR 7-12
 ACCTS commands: UNLOAD..... SMGR 7-33
 ACCTS Error Summary..... SMGR 7-37
 ACCTS Operations..... SMGR 6-5
 ACCTS Program..... SMGR 2-5,3-114,6-5,7-6,7-7,7-8
 ACCTS..... SMGR 2-5
 Active Session Table..... SMGR 7-2
 Address Pointers..... DEBUG 2-7
 Address translation..... PROG I-1
 Allocate Cartridge from Spare Cartridge Pool..... TERM 3-32
 Allow System Level Operator Command..... TERM 2-10
 Alphanumeric (ASCII) Printout..... DEBUG 2-5
 AN Command..... TERM 3-35
 answer file..... OGEN 2-4,3-1,3-2
 APOSN and EAPOS FMP calls..... PROG 3-61
 AS Command..... TERM 4-21
 ASCII Source Code..... TERM 3-7
 Assign an ID Segment To Type 6 File..... TERM 3-88
 Assign Edited File to LS Tracks..... TERM D-14
 Assign LG Tracks..... TERM D-5
 Assign Partition to Program..... TERM 4-21
 ASSIGN PROGRAM PARTITIONS?..... OGEN 2-86,3-15
 Assigning Symbol To Address Just Printed By DEBUG..... DEBUG 2-12
 Assignment or Reassignment of LU..... TERM 4-38
 Autoboot Specification..... SMGR 4-17
 Automatic Output Buffering..... TERM 4-7,4-29,4-30
 Automatic Output Buffering..... SMGR 3-45
 automatic output buffering..... OGEN 2-51,2-59
 Automatic Program Renaming..... TERM 3-92,3-95
 AUTOR..... PROG C-13
 AUX DISC (YES OR NO OR # OF TRKS)?..... OGEN 2-16,3-8
 AUX DISC SUBCHNL?..... OGEN 2-16,3-8
 auxiliary disc subchannel..... OGEN 2-16
 Auxiliary Disc Tracks..... TERM 6-67
 Auxiliary Disc Usage..... SMGR 3-4
 Auxiliary Subchannel Size..... SMGR 2-17,3-4
 Auxiliary Subchannels..... SMGR 3-3

B

B Command..... TERM 5-51
 B-Register..... TERM 6-35
 Back Up a Number of Lines in Destination
 Background Partitions..... TERM 1-2
 Background partitions..... PROG 1-11
 background program map..... OGEN B-8
 Background Programs..... TERM 1-2
 Bad Track Information..... SMGR 4-20
 Bad Tracks..... TERM 3-12,3-68,3-70
 Bad Tracks..... UTIL 4-5

RTE-IVB INDEX

Bad Tracks..... UTIL 4-14
 base page fence..... OGEN B-14
 Base Page Linkages..... TERM 6-10,6-15
 Base page..... PROG I-4
 BASIC Interrupts in HP-IB..... SMGR 3-78
 Basic Programs..... GTAQ 3-8
 Batch and Spooling Initialization..... BHSP 5-1
 Batch Checking..... BHSP 3-3
 Batch Job..... TERM 3-65
 Batch Jobs Session..... BHSP 2-25
 Batch LU Switch Table..... SMGR 3-101
 Batch Mode..... BHSP 2-20
 Batch Processing General Description..... TERM 1-4
 Batch Processing..... BHSP 1-3,2-19
 Batch Setup..... BHSP 2-24
 Batch Spooling..... BHSP 2-22
 Batch Switch Table, \$LUSW..... OGEN 2-69
 Batch-Spool Error Codes..... BHSP B-1
 Batch-Spool System..... BHSP 1-1
 Bell Control..... TERM 5-14
 BG MEMORY LOCK?..... OGEN 2-18,3-8
 Binary Code..... TERM 3-7
 Binary Relocatable Code..... TERM 6-19
 BINRY - disc read or write..... PROG 6-7
 bit bucket (EQT 0)..... OGEN 2-61
 Bit Bucket..... TERM 4-29,4-39
 BL Command..... TERM 4-23
 Blank ID Segment..... TERM 3-89
 Block Mode Operation Of DBUGR..... DBUG D-1
 Block..... TERM 3-3
 Boot Extension..... SMGR 5-4
 BOOT FILE NAMR?..... OGEN 2-24,3-9
 Boot-up Procedure..... SMGR 5-2
 Bootstrap Loader..... SMGR 5-3
 bootstrap loader..... OGEN 2-24,3-9
 Bootup Halts..... SMGR 9-20
 BR (break) command..... OGEN 2-7
 BR Command..... TERM 3-43,4-15,4-25
 Break Flag..... TERM 4-26,4-41
 Break Mode Processor..... SMGR 2-5
 Break mode..... SMGR 1-5
 Break-Mode Command Processing..... TERM 4-13
 Break-Mode..... TERM 4-14,6-49
 Breakpoint/Trace Debugging..... DBUG 6-1
 Breakpoints And Program Control..... DBUG C-5
 BUFFER LIMITS (LOW,HIGH)?..... OGEN 2-70,3-14
 Buffer Limits Examine..... TERM 4-23
 Buffer Limits Modify..... TERM 4-23
 Buffer Limits..... TERM 4-23
 Buffer Limits..... SMGR 8-2
 buffer limits..... OGEN 2-70
 Buffer Size..... UTIL 4-5
 Buffer Size..... UTIL 4-14
 Buffered I/O..... TERM 4-7,4-24

Buffering an I/O Controller..... TERM 4-30
 Buffering..... BHSP 3-7

C

C Command..... TERM 5-38
 CA Command..... TERM 3-36, 3-96, 3-126
 Calculate Globals..... TERM 3-36
 Call HELP Utility..... TERM 3-64
 Calling DBUGR..... TERM 6-31
 Calling library subroutines..... PROG 6-1
 Cancel Characters in Pending Line..... TERM 5-49
 Capability Level For Privileged GASP Commands..... BHSP 5-1
 Capability Level..... GTAQ 1-3
 Capability Level..... SMGR 1-5, 6-18, 6-19, 7-18
 Card Reader Configuration..... SMGR 3-60, 3-68
 Card Reader Driver DVR11..... SMGR 3-60
 Card Reader Driver DVR15..... SMGR 3-68
 Cartridge directory format..... PROG 3-7, H-4
 Cartridge Directory..... TERM 3-12, 3-45, C-21
 Cartridge Dismounting Considerations..... SMGR 2-12
 Cartridge Initialization..... TERM 3-12
 Cartridge List..... TERM 3-38
 Cartridge LU's 2 and 3... SMGR 2-11, 2-16, 5-5, 5-9, 5-18, 5-27, 5-28
 Cartridge Mounting Considerations..... SMGR 2-9
 Cartridge Reference Number..... TERM 3-34, 3-78
 Cartridge Requirements Worksheet..... SMGR 2-1, 2-12, 2-13, 6-2
 Cartridge Size requirements..... SMGR 2-13, 2-14
 Cartridge Types..... SMGR 2-8
 Cartridge..... TERM 3-2, 3-11, 3-28
 Central interrupt control (CIC)..... PROG C-15
 Change Attributes..... BHSP 2-15
 CHANGE BG COMMON?..... OGEN 2-66, 3-13
 CHANGE DRIVR PART?..... OGEN 2-64, 3-13
 Change EDITR Prompt Character..... TERM 5-13
 CHANGE ENTS, AB (absolute)..... OGEN 2-49
 CHANGE ENTS, RP (replace)..... OGEN 2-49
 CHANGE ENTS?..... OGEN 2-49, 3-10
 Change List Device..... TERM 3-74
 Change Log Device..... TERM 3-75
 Change Program Priority..... TERM 4-45
 Change Program Size Requirements..... TERM 4-56
 Change Purge to Save..... BHSP 3-9
 Change Record Position..... BHSP 3-15
 CHANGE RT COMMON?..... OGEN 2-65, 3-13
 Change Save to Purge..... BHSP 3-10
 Change Severity Code..... TERM 3-118
 Change Spool Options..... BHSP 3-12
 Changing a File Name..... GTAQ 2-16
 Changing Auxiliary Cartridges..... SMGR 5-27
 Changing Master Security Code..... SMGR 8-6
 Changing Program Partition Assignments..... SMGR 9-14

RTE-IVB INDEX

Changing System Logical Unit Number Assignments..... TERM 4-39
 Changing the Master Security Code..... TERM 3-68
 Changing The Radix Of Numeric Printout..... DBUG 2-3
 Character Edits using Multipoint..... TERM 5-88
 Character Edits..... GTAQ 2-10
 Circular Scheduling..... TERM 1-2
 CJ - Change Job Status..... BHSP 4-8
 CL Command..... TERM 3-38
 CLAL Command..... TERM 3-38
 Class GET - EXEC 21..... PROG 2-62
 Class GET - general flow..... PROG 2-63
 Class GET..... BHSP 2-17
 Class I/O control - EXEC 19..... PROG 2-60
 Class I/O control - general flow..... PROG 2-60
 Class I/O EXEC calls..... PROG 2-53
 Class I/O..... TERM 4-7
 class I/O..... OGEN 2-69, 2-81, 3-14
 Class number..... PROG 2-53
 Class READ - EXEC 17..... PROG 2-55
 Class READ - general flow..... PROG 2-58
 Class word..... PROG 2-61
 Class WRITE - EXEC 18..... PROG 2-55
 Class WRITE - general flow..... PROG 2-57
 Class WRITE/READ - EXEC 20..... PROG 2-55
 Class WRITE/READ - general flow..... PROG 2-58
 Class..... PROG 2-53
 Clear Buffer Flag..... BHSP 3-13
 Clear Or Set Memory..... DBUG 5-3
 CLOAD (see Compile and Load Utility)
 CLOSE and ECLOS calls..... PROG 3-40
 Close and Queue For Outspooling..... BHSP 3-11
 CN Command..... TERM 3-40
 CNTL Key..... TERM 5-46, 5-47, 5-49, 5-50, 5-51, 5-57, 5-88
 CNTL/C Command..... TERM 5-49
 CNTL/G Command..... TERM 5-14
 CNTL/I Command..... TERM 5-47
 CNTL/R Command..... TERM 5-46
 CNTL/S Command..... TERM 5-47
 CNTL/T Command..... TERM 5-50
 CO - COPY..... UTIL 2-21
 CO Command..... TERM 3-42
 Command Capability Checking..... TERM 3-127
 Command Capability Levels..... TERM 2-1, 2-6
 Command Capability Level Assignments..... SMGR 6-22
 Command Stacking..... TERM 3-130
 Command String..... TERM 3-93
 Command string..... PROG 2-28, 6-24
 Command Summary..... GTAQ 1-7
 Command Summary..... GTAQ 2-17
 Command Summary..... GTAQ 3-6
 Command Summary..... GTAQ 4-6
 comment lines..... OGEN 2-6
 comments..... OGEN 3-3
 common backround..... OGEN 2-66, 3-13, B-4

common real-time..... OGEN 2-65,3-13,B-4
 COMMON..... PROG 1-8
 Compatability Among Other Disc Backup Utilities..... UTIL 2-3
 Compatability Among Disc Models..... UTIL 2-3
 Compile and Load a Program..... GTAQ 3-6
 Compile and Load Utility..... TERM 6-29
 Compile and Load Utility Gen. Desc. TERM 1-5
 Compile and Load Utility Err. Msg. TERM B-17
 Compile and load utility (CLOAD)..... PROG 1-22
 Compile utility (COMPL)..... PROG 1-21
 Compile Utility Err. Mes. TERM B-17
 Compile Utility Gen. Desc. TERM 1-5
 Compile Utility..... TERM 6-2
 Compiling a Source Program..... GTAQ 3-2
 COMPL (see Compile Utility)
 Completed class queue..... PROG 2-54
 Completion of GASP Initialization..... BHSP 5-4
 Concatenate Files..... TERM 6-48
 Conditional Breakpoint..... DBUG 6-2
 Conditional Skip..... TERM 3-65
 Configuration Error Messages..... SMGR 9-21
 Configuration Program..... SMGR 9-3
 Configuration Table..... TERM 2-9,C-27
 Configuration table..... PROG 1-16,J-3
 Configuration Table..... SMGR 2-5,6-1,6-8,7-2,7-32
 Configurator Halts and Error Messages..... SMGR 9-4
 Control block..... PROG 3-11
 Control Non-Disc Device..... TERM 3-40
 Control Statement..... TERM 6-3
 Control Terminal..... TERM 3-49
 CONTROLLER SELECT CODE?..... OGEN 2-14,2-15,3-6
 Controls That Examine Memory And Set The Location
 Counter To A Remote Address..... DBUG 3-2
 Controls To Change The Contents Of Memory..... DBUG 3-2
 Controls To Examine Memory Only - Location Counter
 Does Not Change..... DBUG 3-1
 Controls To Load, Punch And Verify Paper Tape..... DBUG 4-1
 Controls To Temporarily Change The Print Mode Over
 A Series Of Examinations..... DBUG 3-9
 Controls..... DBUG 1-2
 Controls..... DBUG 6-4
 Conventions Followed In The Text..... DBUG 1-4
 CONWD Parameter..... BHSP 2-12
 Copy Files from One Cartridge to Another..... TERM 3-42
 Copy..... UTIL 4-9
 Copy..... UTIL 4-19
 COR.A COR.B - find first word of available memory.... PROG 6-21
 CP43..... PROG C-12
 CR Command..... TERM 3-44,3-46
 CREAT and ECREA calls..... PROG 3-23
 Create a Disc File..... TERM 3-44
 Create a Non-Disc File..... TERM 3-46
 Create File with EDITR..... TERM 5-8
 Creating Files..... GTAQ 2-4

RTE-IVB INDEX

Creating a Procedure File..... GTAQ 4-1
CRETS call..... PROG 3-29
CRN (see Cartridge Reference Number)
CS - Change Spool Setup..... BHSP 2-14
CS - Change Spool Status..... BHSP 4-13
CT Command..... TERM 3-49
CTRL/D..... BHSP 2-32
Current Delimiter..... TERM 5-9,5-13,
5-38,5-39,5-40,5-46,5-48,5-49,5-53,5-56
Current Page Linkage..... TERM 6-11,6-15
Current Page Linkage, Optimizing Use of..... TERM 6-27,
5-57,5-64,5-69,5-71,5-74,5-77,5-80
Current Program State.. .. TERM 4-54
Current Session Program..... TERM 4-25,4-41

D

D Command..... TERM 5-57
D.RTR..... SMGR 3-95,3-96
DA - Deallocate Spooling..... BHSP 4-22
Data control block format..... PROG H-2
Data Control Block..... TERM 3-3,C-19
Data control block..... PROG 3-11
Data transfer..... PROG 3-13
Data..... TERM 3-7
DBL record..... PROG D-6
DBUGR Access..... TERM 6-32
DBUGR At A Glance..... DBUG C-1
DBUGR Breakpoints..... TERM 6-38,6-39
DBUGR Calling sequence..... TERM 6-32
DBUGR Commands..... TERM 6-32
DBUGR Error Messages..... TERM B-28
DBUGR Library Subroutine..... TERM 6-28
DBUGR Modes..... TERM 6-33
DC Command..... TERM 3-33,3-51
DCB (see Data Control Block)
DCPC channel..... OGEN 2-59
DCPC transfers..... PROG 1-6
DCPC..... PROG 1-6
Deadly embrace..... PROG 2-65
DEBUGR (See Interactive Debugger)
Decimal Addition And Subtraction..... DBUG A-3
Decimal To Octal Conversion..... DBUG A-4
Dedicated Cartridges..... TERM 3-16
Dedicated Cartridges..... SMGR 2-12,2-18
DEFINE PARTITIONS..... OGEN 2-82
Defining Symbolic Addresses In DBUG..... DBUG 2-8
Deinitialize..... BHSP 5-4
Delete a Number of Lines in Edit File..... TERM 5-45
Delete Char. from End of Line (using Multipoint)..... TERM 5-89
Delete Characters within a Line (using Multipoint)... TERM 5-90
Delete Lines to Find Field or EOF..... TERM 5-57

Deleting Files..... GTAQ 2-17
 Deleting Symbols From The Symbol Table..... DBUG 2-11
 Description..... UTIL 6-1
 Destination I/O Configuration..... SMGR 4-10
 Destination Work Area..... TERM 5-1,5-3,5-64
 Destination Work Area..... TERM 5-37
 Developing A Program..... GTAQ 3-1
 Device and Interface Cards..... SMGR 3-34
 Device Configuration Inputs..... SMGR 3-43
 Device Control..... SMGR 8-1
 Device Controllers..... SMGR 3-34,3-35
 Device Interface Cards and Drivers..... SMGR 3-44
 Device reference table (DRT)..... PROG C-6
 Device Reference Table (DRT)..... BHSP 2-5
 Device Reference Table (DRT)..... OGEN 2-51,2-61,3-12
 Device Status..... TERM 3-97,4-52
 Device Subchannel Number..... TERM 3-97,4-38,4-52
 Device Time-Out, Examine Current Time-Out Value..... TERM 4-62
 Device Time-Out, Set Time-Out Value..... TERM 4-62
 Device Time-Out..... TERM 4-62
 Device time-out..... PROG 1-12
 direct memory access..... OGEN 2-51
 Directory List..... TERM 3-54
 Disc allocation error messages..... PROG 2-71
 Disc Backup Utility..... TERM 1-5
 Disc backup..... PROG 1-22
 Disc Backup..... SMGR 3-2,3-3
 Disc Cartridge Management..... SMGR 2-8
 Disc Cartridge Restore Utility (READT)..... TERM 6-55,3-16
 Disc Cartridge Save Utility (WRITT)..... TERM 6-51,3-16
 Disc Cartridge Save/Restore Utilities..... TERM 6-53
 Disc Cartridge Save/Reatore Util. Gen. Desc..... TERM 1-6
 Disc Cartridge WRITT,READT Error Messages..... TERM B-32
 Disc Cartridges..... GTAQ 2-2
 Disc Configuration..... SMGR 3-6,3-71,3-73,3-75,3-76
 Disc Configuration:
 Disc Configuration: HP 7900..... SMGR 3-7
 Disc Configuration: HP 7905..... SMGR 3-7
 Disc Configuration: HP 7906(H)..... SMGR 3-14
 Disc Configuration: HP 7920(H)..... SMGR 3-19
 Disc Configuration: HP 7925(H)..... SMGR 3-25
 Disc Configuration: HP 9895..... SMGR 3-31
 Disc Drive Characteristics..... SMGR 3-6
 Disc File Record Formats..... TERM C-16
 Disc file record format..... PROG D-9
 Disc Level..... SMGR 6-19
 Disc Limit..... SMGR 2-10,7-17
 Disc Loader ROM..... SMGR 5-2
 disc loader ROM..... OGEN 2-24
 DISC MODEL #?..... OGEN 2-16
 Disc Planning..... SMGR 2-13,3-3
 Disc Protection..... SMGR 3-96
 disc resident programs..... OGEN 1-3
 disc resident programs, background..... OGEN 2-18

RTE-IVB INDEX

disc resident programs, real-time..... OGEN 2-18
 disc resident time 7905/06(H)/20(H) disc..... OGEN 2-21
 disc resident time 7925(H) disc..... OGEN 2-21
 disc resident time, 7900 disc..... OGEN 2-21
 disc subchannels..... OGEN 2-14,2-15
 Disc track allocation EXEC calls - EXEC 4 or 15..... PROG 2-18
 Disc track management EXEC calls..... PROG 2-17
 Disc track release EXEC call - request code 5 or 16.. PROG 2-20
 Disc Update Program..... UTIL 5-1
 Disc Update Utility..... TERM 1-6
 Disc update..... PROG 1-22
 Disc Utility Magnetic Tape Formats..... UTIL A-1
 Disc..... TERM 3-2
 Discussion of Initialization, Formatting, and Sparring..UTIL 3-11
 Dismount a Cartridge..... TERM 3-51
 Dispatching errors..... PROG 2-68
 Dispatching module..... PROG 1-2
 Display a Number of Lines in Edit File..... TERM 5-25
 Display a Specified Line and Make It Pending
 Line in Edit File..... TERM 5-27
 Display Approximate Number of Words in Destination
 Work Area..... TERM 5-37
 DISPLAY command, symbol name..... OGEN 2-35
 DISPLAY command, TABLE..... OGEN 2-35
 DISPLAY command, UNDEFS..... OGEN 2-35
 DISPLAY command..... OGEN 2-35
 Display Global Parameters..... TERM 3-56
 Display Header While in Edit Session..... TERM 5-35
 Display Line Number of Destination Work Area..... TERM 5-31
 Display Messages..... TERM 3-79
 Display Number of Characters in Pending Line..... TERM 5-33
 Display Session LU Information..... TERM 3-97,4-52
 Display the Pending Line..... TERM 5-38
 Display the Pending Line Number..... TERM 5-30
 Disposition Flags..... BHSP 3-3
 DJ - Display Job Status..... BHSP 4-6
 DL Command..... TERM 3-54,3-86
 DM violation..... PROG 2-67,2-68
 DMA..... TERM 4-29
 DMS (see Dynamic Mapping System)..... OGEN B-14
 DN Command..... TERM 4-27
 Down an I/O Controller or Device..... TERM 4-27
 DP Command..... TERM 3-56,3-126
 DP error..... PROG 2-68
 DR errors..... PROG 2-71,2-78
 Driver mapping table (DMT)..... PROG C-8
 Driver Partition #1..... OGEN B-4
 Driver partition..... PROG 1-8
 driver partitions..... OGEN 2-34,2-64,3-13,B-6
 Drivers..... SMGR 3-43
 DS - Display Spools..... BHSP 4-11
 DU Command..... TERM 3-58
 Dual channel port controller..... PROG 1-6
 Duplicate and Edit Pending Line..... TERM 5-40

Duplicate Program Names.....	TERM 6-17
DVA05.....	SMGR 3-58
DVA12.....	SMGR 3-63
DVA13.....	SMGR 3-66
DVA32.....	SMGR 3-75
DVB12.....	SMGR 3-64
DVP43.....	PROG C-12
DVR00.....	SMGR 3-54
DVR01.....	SMGR 3-55
DVR02.....	SMGR 3-56
DVR05.....	SMGR 3-58
DVR11.....	SMGR 3-60
DVR12.....	SMGR 3-62
DVR15.....	SMGR 3-68
DVR23.....	SMGR 3-70
DVR31.....	SMGR 3-71
DVR32.....	SMGR 3-73
DVR33.....	SMGR 3-76
DVR37.....	SMGR 3-78
DVS43.....	BHSP 1-2,2-4
Dynamic mapping system (DMS).....	PROG 1-10
Dynamic Mapping System (DMS).....	OGEN B-14
Dynamic mapping violations.....	PROG 2-67

E

EAP0S.....	PROG 3-61
EC Command.....	TERM 5-82
ECHO option.....	OGEN 3-2
ECHO?.....	OGEN 2-8,3-6
ECLOS.....	PROG 3-40
ECREA.....	PROG 3-23
Edit Existing File.....	TERM 5-7
Edit Pending Line and Advance Line.....	TERM 5-39
Edit the Pending Line.....	TERM 5-38
Edit Window.....	TERM 5-53,5-56, 5-57,5-64,5-65,5-69,5-71,5-73,5-77,5-80
EDITR (see Interactive Editor)	
EDITR Error Messages.....	TERM B-16
EDITR in a Batch Environment.....	TERM 5-85
EDITR in a Multi-Terminal Environment.....	TERM 5-87
EDITR in a Multipoint Environment.....	TERM 5-88
EDITR Prompt Character.....	TERM 5-7
EDITR Termination.....	TERM 5-8
EDITR Work Areas.....	TERM 5-1
EDITR, Calling.....	TERM 5-4
Effective Address Search.....	DEBUG 5-4
EL Command.....	TERM D-14
ELC Command.....	TERM D-13
Elements Of DEBUG And Text Conventions.....	DEBUG 1-2
ELOCF.....	PROG 3-57
ELR Command.....	TERM D-12

RTE-IVB INDEX

EMA (partition considerations).....	PROG 5-5
EMA (see Extended Memory Area)	
EMA and MSEG defaults.....	PROG 5-3
EMA Firmware Configuration.....	SMGR 3-83
EMA management subroutines.....	PROG 5-6
EMA programming.....	PROG 5-1
EMA programs.....	OGEN 2-72,2-75
EMA record.....	PROG D-7
EMA symbols.....	OGEN 2-50
EMAST subroutine.....	PROG 5-14
EN Command.....	TERM 2-9,4-15
Enable Exchange Pattern Over Range of Lines, with List.....	TERM 5-70
Enable Exchange Pattern Over Range of Lines, without List.....	TERM 5-72
Enabling the System Console to be a Session Terminal..	TERM 2-9
End Edit and Create a File Manager File.....	TERM 5-82
End Edit and Store File on LS Tracks.....	TERM D-12
End Edit, Create New File, and Store on LS Tracks....	TERM D-13
End Edit, Replacing Old File with New File.....	TERM 5-83
End Statement.....	GTAQ 3-1
End-of-File Marks.....	TERM 3-114
End-of-File Processing.....	BHSP 2-32
End-of-Job Message.....	BHSP 2-28
ENT record.....	PROG D-4
ENTER 1ST PARTITION PAGE: XXXXX(DEFAULT)TO YYYYY:...	OGEN 2-75
ENTER Key.....	TERM 5-88
Enter Outspool Destination LU.....	BHSP 5-3
ENTND.....	BHSP 1-2
EO - End of Spooled Job.....	BHSP 2-28
EO Command.....	BHSP 2-28
EPOSN.....	PROG 3-64
EQ Command.....	TERM 4-29,4-30
EQLU - interrupting LU query.....	PROG 6-30
EQT (see Equipment Table)	
EQT Configuration.....	SMGR 8-1
EQT D specification.....	OGEN 2-51,2-59
EQT ENTRY, B specification.....	OGEN 2-51,2-59
EQT ENTRY, driver.....	OGEN 2-51
EQT entry.....	OGEN 2-59
EQT extension.....	OGEN 2-61
EQT M specification.....	OGEN 2-51
EQT S specification.....	OGEN 2-51,2-59
EQT select code.....	OGEN 2-51
EQT T specification.....	OGEN 2-51,2-60
EQT X specification.....	OGEN 2-51,2-61
Equality Search.....	DEBUG 5-2
Equipment table (EQT).....	PROG C-1
Equipment Table (EQT).....	OGEN 3-11,2-51
Equipment Table Assignments.....	SMGR 3-38,3-45,3-55
Equipment Table Entry Assignment.....	SMGR 3-38
EQUIPMENT TABLE ENTRY.....	OGEN 2-51
Equipment Table....	TERM 3-97,4-5,4-24,4-29,4-38,4-52,4-62,4-64
Equipment Time-out.....	SMGR 3-60

ER Command.....	TERM 5-83
EREAD.....	PROG 3-46
error handling.....	OGEN 3-3
Error Message Explanations.....	GTAQ 5-1
Error Messages.....	BHSP B-1
Error Messages.....	UTIL 6-7
Error Messages.....	DEBUG B-1
Error Recovery.....	GTAQ 1-4
Error Recovery.....	GTAQ 1-8
error reporting.....	OGEN 2-3
Error routing.....	PROG 2-75
Errors DM.....	PROG 2-67,2-68
Errors DP.....	PROG 2-68
Errors DR.....	PROG 2-71,2-78
Errors EX.....	PROG 2-68
Errors FMP.....	OGEN 3-3
Errors GEN ERR.....	OGEN 3-4
Errors HLT.....	PROG 2-74
Errors IO.....	PROG 2-71,2-78
Errors LU.....	PROG 2-73,2-80
Errors MP.....	PROG 2-67,2-68
Errors RE.....	PROG 2-69
Errors RN.....	PROG 2-73
Errors RQ.....	PROG 2-69
Errors SC.....	PROG 2-71,2-80
Errors TI.....	PROG 2-69
Errors.....	PROG 2-67
ESC Key.....	TERM 5-51,5-54,5-57,5-62,5-88
EWRIT.....	PROG 3-52
EX - Terminate GASP.....	BHSP 4-5
EX Command.....	TERM 3-62
EX errors.....	PROG 2-68
Examine Memory using DBUGR.....	TERM 6-35
Examine Registers using DBUGR.....	TERM 6-35
Example Summary.....	GTAQ 1-9
Example Summary.....	GTAQ 2-21
Example Summary.....	GTAQ 3-12
Example Summary.....	GTAQ 4-6
Exchange Commands.....	TERM 5-17
EXEC "no-abort" bit.....	PROG 2-5
EXEC assembly language format.....	PROG 2-2
EXEC call error returns.....	PROG 2-5
EXEC call formats.....	PROG 2-1
EXEC Calls.....	BHSP 2-2,3-2,3-8
EXEC description conventions.....	PROG 2-8
EXEC FORTRAN-IV function call format.....	PROG 2-4
EXEC FORTRAN-IV subroutine call format.....	PROG 2-3
EXEC I/O calls.....	OGEN 2-17
Execute Program with DBUGR.....	TERM 6-37
Execute RTE System Level Command.....	TERM 3-120
Executing a Procedure File.....	GTAQ 4-1
Executing a Program.....	GTAQ 3-6
execution interval, absolute starting time.....	OGEN 2-46
execution interval, multiple.....	OGEN 2-46

RTE-IVB INDEX

execution interval, resolution code..... OGEN 2-46
 Executive communication..... PROG 1-18,2-1
 Executive error messages..... PROG 2-67
 Executive halt errors..... PROG 2-74
 Explanation Messages..... UTIL 3-16
 Expressions..... DBUG 1-3
 EXT record..... PROG D-5
 Extend Register..... TERM 6-36
 extended EQT entry..... OGEN 2-51
 Extended Memory Area..... TERM 1-2
 Extended Memory Area Size..... TERM 4-56
 Extended Memory Area Memory Segment (MSEG) Size..... TERM 4-56
 Extended memory area (EMA)..... PROG 5-1
 Extended Memory Area (see EMA)
 external entry points..... OGEN 2-31

F

F Command..... TERM 5-54
 Father program..... PROG 2-23
 FCONT FMP calls..... PROG 3-70
 FCONT Subroutine..... TERM 3-41
 Features..... BHSP 1-1
 FFP Firmware Configuration..... SMGR 3-82/89
 File Access Considerations..... SMGR 2-11
 File Access..... TERM 3-9
 File access..... PROG 3-4
 File definition FMP calls..... PROG 3-22
 File Directory..... TERM 3-12,3-14,3-45,3-48,3-67,6-54,C-22
 File directory..... PROG 3-8,H-5
 File extent..... PROG 3-5
 File Extents..... TERM 3-3,3-10
 File Management Package..... TERM 3-1
 File management package FMP..... PROG 1-19
 File Management Package (see FMP)
 File management system..... PROG 1-19
 File Management System Components..... SMGR 3-93
 File Management System Configuration..... SMGR 3-94,3-95
 File Management System Programs..... SMGR 3-92
 File Manager (FMGR)..... TERM 3-1
 File Manager Programmatic Scheduling..... PROG M-1
 file name restrictions..... OGEN 2-6,2-7
 File Name Specifications..... SMGR 4-9
 file name..... OGEN 2-24
 File positioning..... PROG 3-56
 File Search Process (when Cartridge not Specified)... TERM 3-87
 File Security Code..... TERM 3-14,3-28,3-54,3-86,3-87
 File security code..... PROG 3-8
 File Size..... TERM 3-28,3-55
 file size..... OGEN 2-8,2-14
 File System Conventions..... SMGR 5-9
 File truncation..... PROG 3-40

File Types greater than 7..... PROG 3-4
 File Types..... TERM 3-7
 Files..... TERM 3-2,3-7
 Files..... PROG 3-1
 Fill Files..... SMGR 5-9,5-19
 Find a Line with Find Field - Pending Line to EOF.... TERM 5-54
 Find a Line with Find Field - SOF to EOF..... TERM 5-51
 Firmware Configuration..... SMGR 3-79,3-82
 Firmware Subroutines:
 Firmware Subroutines: EMA..... SMGR 3-83
 Firmware Subroutines: F-Series Computers..... SMGR 3-85
 Firmware Subroutines: Fast FORTRAN..... SMGR 3-84
 Firmware Subroutines: General..... SMGR 3-82
 Firmware Subroutines: VIS..... SMGR 3-93
 Fixed Length Record Files..... TERM 3-7
 Fixed length record format..... PROG D-9
 FL Command..... TERM 4-14,4-31
 Floating Point Default..... SMGR 3-111
 Flush Terminal Buffer..... TERM 4-31
 Flushing the Transfer Stack..... TERM 3-122
 FMGR (see File Manager)
 FMGR Error Code..... TERM 3-30
 FMGR Error Messages..... TERM B-1
 FMGR Initializaion..... SMGR 5-6,5-7,5-8
 FMGR Interactive Scheduling..... TERM E-1
 FMGR Prompt..... TERM 2-14,4-16
 FMGR, see File Manager
 FMGR..... BHSP 1-2,2-19,B-1
 FMP (see File Management Package)
 FMP call description conventions..... PROG 3-20
 FMP call formats..... PROG 3-14
 FMP disc cartridge..... PROG 3-6
 FMP disc files..... OGEN 1-2
 FMP error codes..... PROG 3-87
 FMP errors..... OGEN 3-3
 FMP library..... PROG 1-19
 FORMT Utility Error Messages..... UTIL 3-15
 FORMT Utility..... UTIL 3-1
 Format Compatibility..... UTIL 4-6
 Format a Floppy Disc (FO)..... UTIL 3-4
 Formatting the Floppy Disc..... UTIL 3-14
 FORTRAN Formatted I/O Calls..... BHSP 2-2
 FORTRAN Program Statements..... GTAQ 3-1
 File Name Convention..... GTAQ 3-2
 Files..... GTAQ 2-1
 FSTAT FMP calls..... PROG 3-73
 FTIME - current time formatted..... PROG 6-23
 Function Code..... BHSP 2-12

G

G Command..... TERM 5-65
 G-Type Globals..... TERM 3-19,3-36,6-17
 GASP Commands..... BHSP 4-3
 GASP Error Codes..... BHSP B-2,B-8,B-9,B-10
 GASP Error Explanation..... BHSP 4-5
 GASP Initialization..... BHSP 5-1
 GASP..... BHSP 1-2,1-5,5-1
 GEN ERR errors..... OGEN 3-4
 general system description..... OGEN 1-3
 generation planning..... OGEN 2-1
 generator dialog description..... OGEN 2-2
 GETST - recover parameter string..... PROG 6-24
 GETST Subroutine..... TERM 4-50
 Getting Help from the System..... GTAQ 5-1
 Global Cartridge Requirements..... SMGR 2-17
 Global Cartridges (see System Global Cartridges)
 Global Format..... TERM 3-22
 Global parameter lS..... BHSP 2-11
 Global Parameters..... TERM 3-19,3-124,3-126
 Global Type..... TERM 3-22
 Globally allocated tracks..... PROG 2-17
 GO Command..... TERM 4-32
 Grandfather Disc..... SMGR 3-2,3-42,3-43,5-11,A-1
 Group Account Definition..... SMGR 6-13
 Group Account Entries..... SMGR 7-4
 Group Accounts... SMGR 2-3,2-6,6-6,6-13,6-14,6-21,7-4,7-5,7-16,
 7-19,7-20
 Group Cartridge Requirements..... SMGR 2-17
 Group Cartridge..... TERM 2-8,3-16,3-32,3-53
 Group cartridge..... PROG 1-17
 Group cartridges..... PROG 3-9
 Group Cartridges..... SMGR 2-8,2-17
 Group ID Map..... SMGR 7-4
 GTERR - get SCB error mnemonic..... PROG 6-36
 GTSCB - get SCB..... PROG 6-42

H

H Command..... TERM 5-33
 HE Command..... TERM 3-30,3-64,4-14,4-34
 HELLO File..... SMGR 6-15,6-16,6-17,7-17,7-18
 HELLO Files (see User HELLO Files)
 HELP File Maintenance..... SMGR 5-25
 HELP File Structure..... SMGR 5-24
 HELP File..... TERM 3-64,4-34
 HELP Operation in Session..... SMGR 5-26
 HELP Utility..... TERM 2-2,4-34
 HELP Utility..... SMGR 5-24,5-25,5-26
 HI File..... SMGR 5-23

HI Files.....	TERM 2-13
HL Command.....	TERM 5-35
HLT instructions.....	PROG 2-74
How To Print The Last Quantity Typed In Master Mode If You Have Just Changed Modes.....	DEBUG 2-12
HP 1000 addressing architecture.....	OGEN 2-31
HP 7900 disc.....	OGEN 2-13
HP 7905/06/20/25 disc.....	OGEN 2-15
HP 7906H/7920H/7925H disc.....	OGEN 2-15
HP Character Set.....	TERM A-1
HP-IB BASIC Interrupts.....	SMGR 3-79
HP-IB Configuration.....	SMGR 3-78
HP-IB SRQ Capability.....	SMGR 3-79

I

I Command.....	TERM 5-43
I/O buffering.....	PROG 1-12
I/O Configuration Worksheet.....	SMGR 3-34
I/O control call - EXEC 3.....	PROG 2-13
I/O controller time-out.....	PROG 1-15
I/O Controller.....	TERM 4-27, 4-62, 4-64
I/O controller.....	PROG 1-13
I/O Device Status.....	TERM 4-38
I/O device.....	PROG 1-13
I/O Driver.....	BHSP 2-5
I/O error codes.....	PROG 2-72, 2-78
I/O error message format.....	PROG 2-73
I/O EXEC Calls.....	BHSP 2-12
I/O Reconfiguration.....	SMGR 9-1, 9-5
I/O Select Code.....	TERM 4-29
I/O Select Code.....	BHSP 2-5
I/O Slot.....	SMGR 3-35
I/O slot.....	OGEN 2-51
I/O status - EXEC 13.....	PROG 2-49
I/O Structure Planning.....	SMGR 3-34
I/O without wait.....	PROG 2-53
IBUFR Format.....	BHSP 3-5
ICAPS - get session capability.....	PROG 6-39
ICD/MAC Disc Backup Utility Programs.....	UTIL 2-1
ID extensions.....	OGEN 2-72, 3-15
ID Segment Extension.....	TERM C-6
ID segment extensions.....	PROG B-9
ID Segment. TERM 3-3, 3-80, 3-88, 3-93, 3-110, 4-5, 4-25, 4-41, 6-7, C-1	
ID segments, blank.....	OGEN 2-71
ID segments, long.....	OGEN 2-70, 3-14
ID segments, short.....	OGEN 2-72, 3-15
IDCBS.....	PROG 3-77
IDGET - retrieve program's ID segment address.....	PROG 6-28
IF Command.....	TERM 3-65, 3-126
IFBRK - break flag test.....	PROG 6-27
IFBRK System Subroutine,	TERM 4-26

RTE-IVB INDEX

IFTTY - interactive LU query..... PROG 6-32
 Illegal Status Error Message..... BHSP 2-20
 Immediate scheduling (with or without WAIT)..... PROG 2-23
 IN Command..... TERM 3-67
 Inactive Bit..... TERM 3-33,3-51,3-53
 Inclusive OR..... DEBUG A-2
 Index to GASP Operator Commands..... BHSP 4-2
 Index to SMP Calls..... BHSP 3-1
 Inequality Search..... DEBUG 5-2
 Inhibiting Automatic Program Renaming..... TERM 3-95
 Initial time offset scheduling..... PROG 2-32
 initialization phase..... OGEN 2-2,2-8,3-6
 Initialize Cartridge..... TERM 3-67,3-77
 INPRS - buffer conversion..... PROG 6-17
 input/output processing..... OGEN 1-4
 Insert Characters in Pending Line..... TERM 5-47
 Insert Characters within a Line (using Multipoint)... TERM 5-89
 Insert Text After Pending Line..... TERM 5-44
 Insert Text Before Pending Line..... TERM 5-43
 Inspooling..... BHSP 2-22
 Integrated Controller Discs (ICD)..... SMGR 3-5,3-6,3-75
 Interacting with the System..... GTAQ 1-6
 Interactive Debugger (Also see DBUGR)..... TERM 6-31
 Interactive Debugger Gen. Desc..... TERM 1-6
 Interactive Debugger, Entering DBUGR..... TERM 6-32
 Interactive debugger (DBUGR)..... PROG 1-23
 Interactive Editor (Also see EDITR)..... TERM 5-1
 Interactive editor (EDITR)..... PROG 1-21
 Interactive Editor Gen. Desc. TERM 1-4
 Interactive Mode..... BHSP 2-19
 interactive mode..... OGEN 1-2,3-2
 Interactive Scheduling of FMGR..... TERM E-1
 Interactive Spooling..... BHSP 2-2
 Interface Cards..... SMGR 3-34,3-36,3-43
 interrupt processing..... OGEN 1-4
 Interrupt Service Priority..... SMGR 3-36,3-37
 Interrupt table and trap cells..... PROG C-10
 Interrupt Table, ABS specification..... OGEN 2-62
 Interrupt Table, ENT specification..... OGEN 2-62
 Interrupt Table, PRG specification..... OGEN 2-62
 Interrupt Table. EQT specification..... OGEN 2-62
 Interrupt Table..... OGEN 2-62,3-12
 Interval Timer..... TERM 4-36
 Introduction..... BHSP 1-1,2-1,3-1,4-1
 Introduction..... DEBUG 1-1
 Introduction..... DEBUG 6-1
 IO - I/O Configuration..... UTIL 2-18
 Initialize an LU (IN)..... UTIL 3-5
 Initializing Discs..... UTIL 4-21
 Initializing SAFD..... UTIL 6-1
 Initializing and Sparing the Hard Disc..... UTIL 3-13
 Introduction..... UTIL 1-1
 Introduction..... UTIL 2-1
 Introduction..... UTIL 3-1

Introduction.....	UTIL 4-1
IP43.....	PROG C-12
ISLU.....	BHSP 3-9
ISMP.....	BHSP 3-9
IT Command.....	TERM 4-36,4-42

J

J Command.....	TERM 5-62
JO - Initiate Job For Spooling.....	BHSP 2-26
JO Command.....	BHSP 2-26
Job Entered Batch Device.....	BHSP 2-32
Job Entered From A File.....	BHSP 2-33
Job Entered Interactively.....	BHSP 2-32
Job Error Conditions.....	BHSP 2-37
Job Error Messages.....	BHSP 2-38
Job Input Control.....	BHSP 2-34
Job Manipulation.....	BHSP 4-6
Job Message.....	BHSP 2-26
Job Priority.....	BHSP 2-25
Job Processing.....	BHSP 2-23
Job Status.....	BHSP 2-36
JOB WAIT ON PT.....	BHSP 2-32
JOB.....	BHSP 1-2,1-5
JOB.....	SMGR 3-97
JOBFIL.....	BHSP 2-23,4-1,5-1
Jump to Find Field Line and Make It Pending Line.....	TERM 5-62

K

K Command.....	TERM 5-21
KEYS (see Soft Key Programming Utility)	
Kill Trailing Blanks in Edit File.....	TERM 5-21
KS - Kill Outspool.....	BHSP 4-18
KYDMP (see Soft Key Programming Utility)	

L

L Command.....	TERM 5-25
large background program map.....	OGEN B-8
LCOPY.....	UTIL 2-12
LG (see Load-and-Go Area)	
LG Command.....	TERM D-5,D-10
LGTAT (see Track Assignment Table Log Program)	
LI Command.....	TERM 3-71
Librarian utility (MERGE).....	PROG 1-22
Libraries.....	SMGR 3-103,3-104
library search time.....	OGEN 2-35

RTE-IVB INDEX

LIMEM - Memory Limits.....	PROG 6-43
Limitations.....	DEBUG 1-4
Line Edits.....	GTAQ 2-7
Line Length.....	TERM 5-20
Line Printer Configuration.....	SMGR 3-62,3-63,3-64
Linear Scheduling.....	TERM 1-2
Linkage Word.....	TERM 4-5
Linked Accounts.....	SMGR 2-3,6-20,7-17,7-18,7-19
Linked List Technique.....	TERM 4-5
LINKS IN BASE.....	OGEN 2-31
LINKS IN command.....	OGEN 2-31
LINKS IN CURRENT.....	OGEN 2-31
links, direct.....	OGEN 2-31
links, indirect.....	OGEN 2-31
List All Currently Active Programs in the System.....	TERM 6-18
List Device.....	TERM 5-26
List File Contents.....	TERM 3-71
LIST FILE NAMR?.....	OGEN 2-8,3-6
list file.....	OGEN 3-6
List Header.....	TERM 4-5
LL Command.....	TERM 3-74,E-2
LO Command.....	TERM 3-75,E-2
Load-and-Go Area.....	TERM D-1
Loading a Program.....	GTAQ 3-4
Loading And Using DEBUG.....	DEBUG 1-1
LOADR (see Relocating Loader)	
LOADR Error Messages.....	TERM B-21
LOADR Error Reporting.....	TERM 6-28
LOADR Operation.....	TERM 6-13
Local Common.....	TERM 6-9,6-11
Locally allocated tracks.....	PROG 2-17
Locations of Files on Disc Cartridges.....	TERM 3-11
LOCF and ELOCF FMP calls.....	PROG 3-57
Log Device.....	TERM 3-81
Log-Off Procedure.....	GTAQ 1-7
Log-Off Procedure.....	GTAQ 1-8
Log-Off Process.....	TERM 3-62
Log-On Identification.....	GTAQ 1-3
Log-On Procedure.....	GTAQ 1-3
Log-On Procedure.....	GTAQ 1-7
Logging Off the System.....	TERM 2-5
Logging On the System.....	TERM 2-2
Logical memory.....	PROG 1-5,I-4
logical memory.....	OGEN B-7
Logical Product Reviewed.....	DEBUG 5-1
Logical read or write.....	PROG 3-14
Logical Source Area.....	TERM D-1
Logical Source Tracks.....	TERM 6-68
Logical Unit 2.....	OGEN 2-14,2-15
Logical Unit Assignment.....	BHSP 2-10
Logical Unit Assignments.....	SMGR 3-34,3-37,3-38,6-2,6-3
Logical Unit Configuration.....	SMGR 8-1
Logical unit lock - example.....	PROG 2-65
Logical unit lock error codes.....	PROG 2-73,2-80

Logical unit lock..... PROG 1-12
 Logical Unit Number..... TERM 3-18
 Logical unit numbers..... PROG 1-13
 logical unit numbers..... OGEN 2-61
 Logical Unit..... TERM 3-3
 LOGLU - returns LU of scheduling program..... PROG 6-33
 LOGLU Subroutine..... TERM 6-32
 LOGON Program..... TERM 1-3,2-1
 LOGON..... BHSP 2-25
 LS (see Logical Source Area)
 LS Command..... TERM D-4,D-11
 LS Tracks..... TERM 3-91
 LSAVE..... UTIL 2-7
 Loading FORMT..... UTIL 3-2
 Loading On-Line Utilities..... UTIL 2-5
 Loading SAFD..... UTIL 6-1
 Loading and Initializing SAFD..... UTIL 6-1
 Loading the Off-Line Utility Using a Loader ROM..... UTIL 2-15
 Loading the Off-Line Utility Using !MTLDR..... UTIL 2-16
 Loading the On-Line Utilities..... UTIL 4-5
 LU Command..... TERM 4-38,4-64
 LU Mapping..... TERM 3-105
 LU Switching..... SMGR 2-3
 LURQ - logical unit lock..... PROG 6-13
 LUSES - find SCB..... PROG 6-35
 LUTRU - true system LU..... PROG 6-34

M

M Command..... TERM 5-23
 Magic Symbols..... DEBUG 6-9
 Magnetic Tape Configuration..... SMGR 3-69
 Magnetic Tape Information for LSAVE, USAVE and RESTR.. UTIL 2-6
 Mailbox I/O..... PROG 2-53
 MAP ALL..... OGEN 2-25
 MAP command..... OGEN 2-25
 Map Examination Special Mode..... DEBUG 3-7
 MAP GLOBALS..... OGEN 2-25
 MAP LINKS..... OGEN 2-25
 MAP MODULES..... OGEN 2-25
 MAP OFF..... OGEN 2-25
 Map Registers..... DEBUG C-7
 Mapping segment (MSEG)..... PROG 5-1
 Master Security Code..... TERM 3-14,3-54,3-67,3-69,3-70
 Master security code..... PROG 3-8
 Master Security Code..... SMGR 5-7,6-10,8-6
 Max Number of Jobs, Job File Disc..... BHSP 5-1
 MAXIMUM # OF PARTITIONS?..... OGEN 2-73,3-15
 Maximum Number Active and Pending Spool Files..... BHSP 5-3
 MC Command..... TERM 3-16,3-69,3-76
 ME Command..... TERM 3-79
 Meeting Changing Cartridge Requirements..... SMGR 2-19

RTE-IVB INDEX

MEM SIZE?..... OGEN 2-24,3-9
 MEM Status Special Mode..... DEBUG 3-7
 MEM. RES. ACCESS TABLE AREA II?..... OGEN 2-17,3-8
 Memory allocation table (MAT)..... PROG I-6
 Memory Change Controls That Maintain The Location
 Counter Within The Current Sequence..... DEBUG 3-3
 Memory Change Controls That Change The Location
 Counter To A Remote Sequence Of Code..... DEBUG 3-5
 Memory Examination And Modification..... DEBUG 3-1
 Memory lock..... PROG 2-34
 memory locking background..... OGEN 2-18
 memory locking real-time..... OGEN 2-18
 Memory management..... PROG 1-5
 memory maps Port A..... OGEN B-7
 memory maps Port B..... OGEN B-7
 memory maps System..... OGEN B-7
 memory maps User..... OGEN B-7
 Memory maps..... PROG 1-5
 Memory protect fence..... PROG 1-10
 memory protect fence..... OGEN B-17
 Memory protect violations..... PROG 2-67
 Memory protection..... PROG 1-10
 memory protection..... OGEN B-14
 Memory Reconfiguration..... SMGR 9-1,9-8
 memory resident base page..... OGEN B-6
 Memory resident library..... PROG 1-8,6-4
 memory resident library..... OGEN 2-38,3-15,B-6
 memory resident links..... OGEN 2-34
 memory resident map..... OGEN B-8
 Memory resident programs..... PROG 1-9
 memory resident programs..... OGEN 2-17,2-18
 memory resident program library..... OGEN B-7
 Memory Search And Clear..... DEBUG 5-1, C-5
 Memory Search..... DEBUG 5-1
 Memory size - EXEC 26..... PROG 2-47
 memory size..... OGEN 1-1,2-24,3-9
 Memory-Image Code..... TERM 3-7
 Memory-Image Program File Formats..... TERM C-18
 Memory-image program file formats (type 6)..... PROG D-11
 memory..... OGEN 1-3,1-4,3-9,B-1
 MERGE (see Merge Utility)
 Merge Source File..... TERM 5-23
 Merge Utility, General Description..... TERM 1-6
 Merge Utility..... TERM 6-50
 Message Files..... SMGR 6-7,7-31
 MESSS - message processor interface..... PROG 6-19
 microcode instructions..... OGEN 2-49
 Mini Cartridge Tape Format..... UTIL 5-2
 Mixed Page Links..... TERM 6-11,6-15
 MMAP subroutine..... PROG 5-13
 Mode Control..... DEBUG C-1
 Modify Memory using DBUGR..... TERM 6-35
 modify program execution interval (see execution
 interval)..... OGEN 2-37

MODIFY PROGRAM PAGE REQUIREMENTS?..... OGEN 2-85
 modify program priority..... OGEN 2-37
 modify program type..... OGEN 2-37
 Modify Session Switch Table..... TERM 3-105
 Modifying Files..... GTAQ 2-7
 More About Operators..... DBUG A-1
 mother partition..... OGEN 2-83
 Mother Partitions..... TERM 1-2
 Mother partitions..... PROG 1-11
 Mount a Cartridge..... TERM 3-76
 Move Relocatable Program..... TERM D-6
 Move Source File..... TERM D-2
 MP error..... PROG 2-67,2-68
 MR Command..... TERM D-6
 MS Command..... TERM D-2
 MTM (see Multi-Terminal Monitor)
 MTM Break-Mode Prompt..... TERM 4-16
 MTM Configuration..... SMGR 3-116
 Multi-Terminal Monitor (Also see MTM)..... TERM 2-12,4-13
 Multi-Terminal Monitor Features..... SMGR 1-5
 Multi-Terminal Monitor Modules..... SMGR 3-111
 Multi-Terminal Monitor (MTM)..... OGEN 2-71
 Multiple Access Controller (MAC) Discs..... SMGR 3-5,3-6,3-73
 Multiple CPU Disc Systems..... SMGR 3-5
 Multiple Disc Controllers..... SMGR 3-5
 Multiple Disc CPU Systems..... SMGR 3-5
 Multipoint Terminal Character Edits..... GTAQ 2-12
 Multipoint Terminals..... TERM 6-31
 Multiprogramming..... TERM 1-2
 Multiprogramming..... PROG 1-2
 Multiterminal Monitor Features..... SMGR 1-6

N

N Command..... TERM 5-30
 n Command..... TERM 5-27
 NAM record..... PROG D-3
 NAME FMP call..... PROG 3-78
 Namr Parameter..... TERM 3-27
 ND Command..... TERM 5-31
 Next Scheduled Execution Time..... TERM 4-54
 NO Parameter..... BHSP 2-27
 Non-Disc Device..... TERM 3-3
 Non-exclusive OPEN..... PROG 3-36
 Non-Session Cartridges..... TERM 2-8,3-16
 Non-session Cartridge..... SMGR 2-9
 Non-Session Cartridge Requirements..... SMGR 2-17
 NS Parameter..... BHSP 2-27
 Number of Spool Files (5 to 80)..... BHSP 5-2
 Number, Location of Spool Files..... BHSP 5-2

O

O Command..... TERM 5-40,5-88
 Obtaining Program Status GTAQ 5-2
 Obtaining System Status..... GTAQ 5-4
 Octal Addition And Subtraction..... DBUG A-3
 Octal To Decimal Conversion..... DBUG A-4
 OF Command..... TERM 3-80,3-84,3-89,4-14,4-40
 Off-Line Error Messages..... UTIL 2-23
 Off-Line Error Messages..... UTIL 4-22
 Off-Line Operations..... UTIL 2-15
 Off-Line Operations..... UTIL 4-13
 Off-Line Utility Tasks..... UTIL 2-18
 ON Command..... TERM 4-36,4-42
 On line Generator..... SMGR 1-6,3-1
 On-Line Error Messages..... UTIL 2-13
 On-Line Error Messages..... UTIL 4-11
 On-line generator (RT4GN)..... PROG 1-22
 On-line generator dialog..... OGEN 2-2
 On-line generator features..... OGEN 1-2
 On-line generator requirements..... OGEN 1-3
 On-line generator size..... OGEN 1-3
 On-Line Generator..... TERM 1-5,6-7
 On-Line Operations..... UTIL 2-5
 On-Line Operations..... UTIL 4-4
 OP Command..... TERM 2-10,4-15
 OPEN and OPENF calls..... PROG 3-34
 Open Files..... TERM 3-84
 Open flag word..... PROG B-7
 OPEN flags..... PROG 3-37
 Operating Environment..... UTIL 1-1
 Operating Environment..... DBUG 1-1
 Operating mode, direct..... OGEN 2-3
 Operating mode, interactive..... OGEN 2-3
 Operating System Module, \$ALC..... OGEN B-6
 Operating System Module, \$ASC4..... OGEN B-5
 Operating System Module, \$TRN4..... OGEN B-6
 Operating System Module, DISP4..... OGEN B-5
 Operating System Module, EXEC4..... OGEN B-5
 Operating System Module, OCMD4..... OGEN B-6
 Operating System Module, PERR4..... OGEN B-6
 Operating System Module, RTIME..... OGEN B-5
 Operating System Module, RTIO4..... OGEN B-5
 Operating System Module, SCHD4..... OGEN B-6
 Operation System Generation Requirements..... SMGR 3-78
 Operation..... UTIL 5-2
 operator commands..... OGEN 2-3
 Operator Suspend a Program..... TERM 4-53
 Operators..... DBUG 1-4
 Optional Libraries, \$DKULB/\$DSCLB/\$VLIB1/%DBKLB/%DBUGR/
 %DECAR/%UTLIB..... SMGR 3-104,3-105
 Other Conversions..... DBUG A-3
 Output Buffering..... SMGR 3-45,8-2

OUTPUT FILE NAMR?..... OGEN 2-8,3-6
 Output Modes..... DEBUG 2-1
 Outspool Error Messages..... BHSP B-7
 Outspool Errors..... BHSP 2-18
 Outspool Logical Unit Assignment..... BHSP 2-12
 Outspool Priority..... BHSP 2-10
 Outspool Status..... BHSP 2-17
 Outspooling..... BHSP 2-17,2-24
 Overflow Register..... TERM 6-36

P

P Command..... TERM 5-26,5-38
 P-Type Globals..... TERM 3-20,3-36,6-17
 PA Command..... TERM 3-81,3-126
 Pack a Disc Cartridge..... TERM 3-83
 Packing buffer..... PROG 3-11
 page requirements..... OGEN 1-3
 pahse, table generation..... OGEN 2-2,2-51
 Paper tape word format..... PROG D-8
 parameter input phase..... OGEN 2-2,2-37,3-10
 Parameter string..... PROG 2-28,6-24
 Parameter Syntax Rules..... TERM 3-25
 PARAMETERS..... OGEN 2-37,3-10
 Parity errors..... PROG 2-69
 PARSE (\$PARS) - ASCII parse subroutine..... PROG 6-15
 partition definition phase..... OGEN 2-2,2-75
 partition definition table, \$MATA..... OGEN 2-73
 Partition Management..... SMGR 8-6
 Partition Number..... TERM 4-54
 Partition status - EXEC 25..... PROG 2-45
 Partition Status..... TERM 6-43,6-47
 partition, background..... OGEN 2-84
 partition, mother..... OGEN 2-83
 partition, R (reserve)..... OGEN 2-83
 partition, real-time..... OGEN 2-84
 partition, size..... OGEN 2-83
 partition, type..... OGEN 2-83
 Partitions..... PROG 1-9,1-10,1-4
 partitions..... OGEN 1-3,2-73,2-80,2-82
 Password..... GTAQ 1-3
 Pause and Send Message..... TERM 3-81
 Pending class queue..... PROG 2-54
 Pending Line..... TERM 5-2
 Peripheral Resource Usage..... SMGR 1-10,1-11
 Peripheral Subchannels..... SMGR 3-5,3-37
 Permanent Program Load..... TERM 6-10
 permanent program..... OGEN 2-71
 Permanent Programs..... TERM 3-80
 Permanent Programs..... SMGR 3-115,3-116
 Permanent System Utilities..... SMGR 3-116
 phase, initialization..... OGEN 2-2,2-8,3-6

RTE-IVB INDEX

Phase, parameter input..... OGEN 2-2,2-37,3-10
 phase, partition definition..... OGEN 2-2,2-74
 phase, program input..... OGEN 1-2,2-2,3-9
 phase, program loading..... OGEN 2-2,2-66
 phase, system boundaries..... OGEN 2-2,2-64
 phase, system loading..... OGEN 2-2,2-66
 phases..... OGEN 2-2
 Photoreader Configuration..... SMGR 3-56
 physical memory size..... OGEN 1-3,3-9
 Physical memory..... PROG 1-5,1-6
 physical memory..... OGEN 1-4,B-1
 Physical read or write..... PROG 3-14
 PK Command..... TERM 3-83,3-86
 Plus, Blank, and Minus..... DEBUG A-1
 Point-To-Point and Multipoint Terminals..... GTAQ 1-2
 Port map A..... PROG 1-6
 Port map B..... PROG 1-6
 Position Vector..... BHSP 3-15
 Positioning type 0 files..... PROG 3-65
 Positioning type 1 and 2 files..... PROG 3-65
 Positioning type 3 and above files..... PROG 3-65
 POSNT and EPOSN calls..... PROG 3-64
 POST FMP call..... PROG 3-79
 Power fail..... PROG 1-14
 power fail..... OGEN 2-63
 Power fail/auto restart..... PROG C-12
 Power Fail/Restart Configuration..... SMGR 3-93
 PR Command..... TERM 4-45
 Print Time..... TERM 4-60
 Printout As Numeric Constants..... DEBUG 2-2
 Printout As Symbolic Instructions..... DEBUG 2-1
 Priority Assignment..... BHSP 2-25
 PRIV. INT. SELECT CODE?..... OGEN 2-17,3-8
 Private Cartridge..... TERM 2-8,3-15,3-32,3-53,3-62
 Private Cartridge..... SMGR 2-9
 Private cartridges..... PROG 1-17,3-9
 Private Group and System Cartridges..... GTAQ 2-2
 Privileged interrupt processing..... PROG 1-15
 privileged interrupt card..... OGEN 2-17,3-8
 Privileged subroutine structure..... PROG 6-3
 Privileged-fence..... PROG 1-15
 PRMPT Program..... TERM 4-13
 Procedure File Comments..... TERM 3-31
 Procedure File Example..... TERM 3-127
 Procedure File.. TERM 3-17,3-19,3-31,3-37,3-65,3-81,3-122,3-126
 Procedure Files..... BHSP 2-20
 PROG INPUT PHASE..... OGEN 2-24
 Program completion - EXEC 6..... PROG 2-40
 Program completion saving resources..... PROG 2-41
 Program Copies..... SMGR 3-106,5-22
 Program Error Handling..... GTAQ 3-6
 Program ID Segment..... TERM C-1
 Program ID segment..... PROG B-4
 program input phase..... OGEN 1-2,2-2,3-9

Program JOB..... BHSP 2-23
 Program Load And Verify..... DBUG C-5
 Program Load..... DBUG 4-1
 Program Loading Considerations..... SMGR 3-105,3-112,3-113,5-10
 program loading phase..... OGEN 2-2,2-66
 Program management error codes..... PROG 2-73
 Program management EXEC calls..... PROG 2-22
 program maps, background..... OGEN B-8
 program maps, large background..... OGEN B-8
 program maps, real-time..... OGEN B-8
 Program Partitions..... TERM 1-2
 Program Priority..... TERM 4-54
 Program Quantum..... TERM 4-46
 Program Relocation..... TERM 6-7
 Program scheduling - EXEC 9,10,23, and 24..... PROG 2-23,M-1
 program scheduling..... OGEN 1-4
 Program segment load - EXEC 8..... PROG 2-36
 Program Segmentation..... TERM 1-3
 Program segmentation..... PROG 4-1
 Program Size Information..... TERM 4-56
 program size requirements..... OGEN 2-85
 Program state 0..... PROG G-1
 Program state 1..... PROG G-1
 Program state 2..... PROG G-1
 Program state 3..... PROG G-1
 Program state 4..... PROG G-1
 Program state 5..... PROG G-2
 Program state 6..... PROG G-2
 Program States, Current State..... TERM 4-54
 Program States, Disc Suspended (type 5)..... TERM 4-4
 Program States, Dormant (type 0)..... TERM 4-3
 Program States, General Wait (type 3)..... TERM 4-4
 Program States, I/O Suspended (type 2)..... TERM 4-3
 Program States, Lists..... TERM 4-5
 Program States, Memory Suspended (type 4)..... TERM 4-4
 Program States, Operator Suspended (type 6)..... TERM 4-4
 Program States, Scheduled (type 1)..... TERM 4-3
 Program States..... GTAQ 5-4
 Program States..... TERM 4-3
 Program states..... PROG G-1
 Program Status..... TERM 6-43
 Program suspend - EXEC 7..... PROG 2-38
 Program Suspend EXEC Call..... TERM 4-53
 Program swapping control - EXEC 22..... PROG 2-34
 Program time scheduling - EXEC 12..... PROG 2-31
 Program Types..... TERM 6-11
 Program types..... PROG 1-3,F-1
 Program-to-program communication..... PROG 2-65
 Program-to-program..... PROG 2-65
 Programs..... TERM 3-7
 Prompt String..... SMGR 6-7,7-31
 Protection Status..... UTIL 4-6
 Protection Status..... UTIL 4-14
 PRTN Subroutine..... TERM 3-20,3-93,6-17

RTE-IVB INDEX

PRTN, PRTM - parameter return.....	PROG 6-25
PTERR - Update SCB error mnemonic.....	PROG 6-37
PU Command.....	TERM 3-85
Punch Configuration.....	SMGR 3-56
Punching Binary Tapes And Producing Patches.....	DEBUG 4-1
Punching.....	DEBUG C-5
Purge a Permanent Program.....	TERM 6-19
Purge a Temporary Program.....	TERM 4-40
Purge call.....	PROG 3-43
Purged Files.....	TERM 3-83
Purging a File.....	TERM 3-85

Q

Q Command.....	TERM 5-50,5-88
QU Command.....	TERM 4-46
Quantum Multiplier.....	SMGR 8-3
Queue For Outspooling.....	BHSP 3-10
Queue schedule (with or without WAIT).....	PROG 2-24

R

R Command.....	TERM 5-42
R\$PN\$ Program.....	TERM 4-13
RE - RESTORE.....	UTIL 2-20
Re-entrant I/O.....	TERM 4-7
Read or write call - EXEC 1 or 2.....	PROG 2-10
READF and EREAD calls.....	PROG 3-46
READT (see Disc Cartridge Save/Restore Utilities)	
Real-time and background COMMON.....	PROG 1-9
Real-time basic/1000D.....	PROG 1-18
Real-Time Clock.....	TERM 4-60,4-61
Real-Time Partitions.....	TERM 1-2
Real-time partitions.....	PROG 1-11
real-time program map.....	OGEN B-8
Real-Time Programming.....	TERM 1-1
Real-Time Programs.....	TERM 1-2
Reconfiguration Procedure.....	SMGR 9-4
Reconfiguration.....	TERM 1-2
reconfigurator module, \$CNFG.....	OGEN B-6
reconfigurator.....	OGEN 2-73
Record Format.....	TERM 3-59
Record Size.....	TERM 3-28
Record.....	TERM 3-3
Reducing Segmented Program Load Time.....	TERM 6-26
Reentrant I/O.....	PROG 1-12
reentrant I/O.....	OGEN 2-81
Reentrant subroutine structure.....	PROG 6-2
Register Examination.....	DEBUG C-3
REIO - reentrant I/O subroutine.....	PROG 6-6

Release a Program's Assigned Tracks.....	TERM 3-91
Release Disc Tracks.....	TERM 4-49
Release Reserved Partition.....	TERM 4-65
Releasing an ID Segment Previously Assigned.....	TERM 3-88
Relocatable and absolute record formats.....	PROG D-2
Relocatable Code.....	TERM 3-7,6-3
Relocatable Library RMPAR.....	BHSP 3-9
Relocatable Record Formats.....	TERM C-9
RELOCATE command.....	OGEN 2-30,2-33
Relocating loader (LOADR).....	PROG 1-21
Relocating Loader (see LOADR).....	TERM 6-5 thru 6-30
Relocating Loader Gen. Desc.	TERM 1-5
Relocating Loader Loading From a Logical Unit.....	TERM 6-23
Relocating Loader Loading Segmented Programs.....	TERM 6-23
Relocating Loader Size Requirements.....	TERM 6-6
relocation guidelines, disc resident programs...	OGEN B-19,B-19
relocation guidelines, Mem. Res. Library Modules.....	OGEN B-19
relocation guidelines, memory resident programs.....	OGEN B-19
relocation guidelines, Partition Resident Drivers....	OGEN B-17
relocation guidelines, SSGA.....	OGEN B-18
relocation guidelines, System Driver Area (SDA).....	OGEN B-18
relocation guidelines, System Modules.....	OGEN B-18
relocation guidelines, Table Area II Modules.....	OGEN B-18
relocation guidelines, Table Area I Modules.....	OGEN B-17
Rename a File.....	TERM 3-87
Replace Characters in Pending Line.....	TERM 5-46
Replace Characters on Pending Line.....	TERM 5-65
Replace Characters on Pending Line and Find Next Occurrence.....	TERM 5-67
Replace Pending Line with Text.....	TERM 5-42
Request FMGR Error Explanation.....	TERM 3-30
Reschedule Suspended Program.....	TERM 4-32
Resource Management.....	TERM 1-3
Resource management.....	PROG 1-15
Resource number (RN).....	PROG 1-15,6-9
Resource number allocation.....	PROG 6-11
Resource number errors.....	PROG 2-73
Resource number lock.....	PROG 6-11
Resource numbers - example.....	PROG 2-65
resource numbers.....	OGEN 2-69,3-14
Response Loading Considerations.....	SMGR 3-113
response preparation.....	OGEN 2-7
Response Time Considerations.....	SMGR 1-9
Restart Session Copy of FMGR.....	TERM 4-48
Restore Disc Cartridge from Mag Tape Back to Disc....	TERM 6-52
RESTR.....	UTIL 2-9
Reconfigure DVA32 and DVR32.....	UTIL 2-17
Required System Setup.....	UTIL 5-1
Restarting the Off-Line Utility Program !DISK.....	UTIL 2-20
Restore.....	UTIL 4-8
Restore.....	UTIL 4-18
Restoring a Flexible Disc.....	UTIL 6-4
Restrictions.....	DEBUG 6-3
Retrieve Record Position.....	BHSP 3-14

RTE-IVB INDEX

RETURN Key..... TERM 5-88
 Reverse Common..... TERM 6-9,6-11,6-14
 Rewind Magnetic Tape..... TERM 3-41
 Rewind..... BHSP 2-15
 RMPAR Subroutine..... TERM 4-33,4-43,4-50,6-17
 RMPAR..... BHSP 3-2,3-16
 RN Command..... TERM 3-87
 RNRQ - resource management..... PROG 6-9
 RP Command..... TERM 3-88,3-110
 RP command..... OGEN 2-71
 RPL feature..... OGEN 2-24
 RS - Restart Spool..... BHSP 4-15
 RS Command..... TERM 4-14,4-48
 RT Command..... TERM 3-91,4-49
 RT MEMORY LOCK?..... OGEN 2-18,3-8
 RT4GN (see On-Line Generator)
 RT4GN On-Line Generator..... OGEN 1-4,3-1
 RTE assembler segmentation..... PROG 4-5
 RTE FORTRAN-IV segmentation..... PROG 4-2
 RTE FORTRAN-IV..... PROG 1-17
 RTE Micro-assembler..... PROG 1-18
 RTE On-Line Generator (see also RT4GN)..... OGEN 1-1
 RTE Operating System Configuration..... SMGR 3-81
 RTE System Commands Processing..... TERM 4-13
 RTE System Commands..... TERM 4-1,4-19
 RTE-IV Assembler..... PROG 1-18
 RTE-IV library subroutines..... PROG 6-1
 RTE-IV system disc layout..... PROG B-9
 RTE-IVB Break-Mode Commands..... TERM 4-1
 RTE-IVB Break-Mode Operation..... TERM 2-15
 RTE-IVB Operating System Description..... OGEN 1-4
 RTE-IVB System Disc Layout..... TERM C-6
 RTE-IVB..... TERM 1-1
 RTIOC..... PROG C-14
 RU Command (FMGR)..... TERM 3-92,3-110
 RU Command (System)..... TERM 4-50
 RU command..... OGEN 3-1
 Run a Program from FMGR..... TERM 3-92
 Run a Program from the System Level..... TERM 4-50
 Run WHZAT Program..... TERM 3-125,4-66,6-43
 Running A Batch Job..... BHSP 2-31
 Running KYDMP..... TERM 6-65
 Running LGTAT..... TERM 6-67
 Running Program FMGR..... TERM E-1
 Running Program GASP..... BHSP 4-4
 RWNDF FMP calls..... PROG 3-68

S

S Command..... TERM 5-37
 S-Type Globals..... TERM 3-20
 SA Command..... TERM D-8

SAM (see System Available Memory)
 SAM Extension Reconfiguration..... SMGR 9-10
 sample RTE-IVB system..... OGEN 1-5
 Sample Worksheet Conventions..... SMGR 3-42
 Save a Disc Cartridge on Mag Tape..... TERM 6-51
 Save a Temporary Program as a Type 6 File..... TERM 3-109
 Save Program on LS or LG Tracks as File..... TERM D-8
 Save..... UTIL 4-7,4-15
 Save/restore utility (WRITT, READT)..... PROG 1-22
 Saving a Flexible Disc..... UTIL 6-2
 Saving the Modified File..... GTAQ 2-15
 SCB (see Session Control Block)
 Schedule a Program..... TERM 4-42
 Schedule call error codes..... PROG 2-71,2-80
 Scheduling EXEC requests..... PROG 2-23,M-1
 Scheduling FMGR Interactively..... TERM E-1
 Scheduling module..... PROG 1-2
 scheduling string passage..... OGEN 2-81
 scratch file..... OGEN 3-5
 scratch tracks..... OGEN 3-5
 SD - Shut Down..... BHSP 4-20
 SDA (see System Driver Area)
 SE Command..... TERM 3-96,3-126
 Search Commands..... TERM 5-17
 Search Limits..... DBUG 5-2
 Sector..... TERM 3-2
 SEGLD - program segment load..... PROG 6-41
 Segment overlay..... PROG 4-1
 Segmented Programs..... TERM 6-8,6-39
 Select Code and Disc Platter/unit Specification..... SMGR 4-9
 Select Code Assignments..... SMGR 3-35,3-36,3-37
 select code..... OGEN 3-6
 Send Message to a Session User..... TERM 3-107
 Send Message to List Device..... TERM 3-35
 Send Message to System Console..... TERM 3-121
 Send Message to System Console..... TERM 4-59
 Sequence Numbers in Edit File..... TERM 5-18
 Serially reusable program completion..... PROG 2-40
 Session Account File..... SMGR 2-5
 Session Account Planning Overview..... SMGR 2-1
 Session Account Structure..... SMGR 2-2
 Session Account Structure Planning..... SMGR 2-6
 Session Break mode Processors..... SMGR 2-6,3-114
 Session Break-Mode Prompt..... TERM 4-16
 Session Concept..... SMGR 2-1
 Session Control Block..... TERM 2-9,3-17,3-51,3-53,3-77,C-25
 Session control block (SCB)..... PROG 1-16
 Session Control Block..... BHSP 2-24
 Session Control Block..... SMGR 1-5,2-2,5-26
 Session Identification Number..... TERM 2-4,4-14,5-87
 Session log on/log off Processors..... SMGR 2-6,3-114
 Session Logical Unit Number..... TERM 3-97,3-18,4-52
 Session LU Allocation Worksheet..... SMGR 6-2
 Session LU Definition..... SMGR 6-1

RTE-IVB INDEX

Session LUs.....	PROG 1-16
Session Memory Allocation.....	SMGR 6-6,6-10,6-11,7-31
Session Monitor (SM).....	OGEN 2-71
Session Monitor Components.....	SMGR 2-5
Session Monitor Configuration.....	SMGR 3-113,3-114
Session Monitor Features.....	SMGR 1-4,1-5
Session Monitor Initialization.....	SMGR 6-1
Session Monitor Loading Modules.....	SMGR 3-115
Session Monitor.....	TERM 1-3,2-1,2-11,4-13
Session monitor.....	PROG 1-16
Session Switch Table. TERM 1-3,2-1,2-9,3-16,3-18,3-77,3-97,C-27	
Session switch table (SST).....	PROG 1-16,J-3
Session Switch Table.....	BHSP 2-5
Session Switch Table.....	SMGR 2-2,2-3
Session Terminal Assignment.....	SMGR 3-37
Session word.....	PROG B-8
SESSN - in session query.....	PROG 6-38
Set Break Flag.....	TERM 4-25
Set Buffer Flag.....	BHSP 3-12
Set Edit Window.....	TERM 5-17
Set EDITR Tab Stops.....	TERM 5-15
Set Global Parameters.....	TERM 3-96
Set Line Length in Edit File.....	TERM 5-20
Set Logical Source Pointer.....	TERM D-4
Set Real-Time Clock.....	TERM 4-61
Set Up Spool File for I/O Device.....	TERM 3-99
Setting a Label using DBUGR.....	TERM 6-37
Setup Buffer.....	BHSP 3-3
Setup With SPOPN.....	BHSP 3-3
Severity Code.....	TERM 3-118
Severity Code.....	BHSP 2-22
Short ID Segments.....	TERM C-6
Short ID segments.....	PROG B-9
Shutdown.....	SMGR 7-27,7-29,7-30
Single User Configuration.....	SMGR 3-117
SIO Record Format.....	TERM C-17
SIO record format.....	PROG D-10
Size of Spool Files (In Blocks).....	BHSP 5-2
SL - Spool Setup and Outspool Control.....	BHSP 2-8
SL Command.....	TERM 3-97,3-99,3-105,4-14,4-39,4-52
SL Command.....	BHSP 2-6
SM Command.....	TERM 3-79,3-107
SMP - Error Checking.....	BHSP 3-9
SMP Calls - Introduction.....	BHSP 3-2
SMP Error Messages.....	BHSP B-6
SMP Program Calls.....	BHSP 1-5
SMP.....	BHSP 1-2,1-5,2-24
Soft Key Programming Utility.....	TERM 6-58
Creating A Soft Key Command Set.....	TERM 6-60
General Description.....	TERM 1-6
Initializing Soft Keys.....	TERM 6-59
KEYS Program Error Messages.....	TERM 6-64
KYDMP.....	TERM 6-58,6-67
KYDMP Program Error Messages.....	TERM 6-68

Listing A Soft Key Command Set.....	TERM 6-63
Modifying A Soft Key Command Set.....	TERM 6-61
Outputting A Soft Key Command Set.....	TERM 6-62
Soft Key Command Set Dump.....	TERM 6-67
Soft Key Labels.....	TERM 6-59
Soft key programs (KEYS and KYDMP).....	PROG 1-23
Son program.....	PROG 2-23
Source File.....	TERM 6-2
Source Program Reminders.....	GTAQ 3-1
Source Record Formats.....	TERM C-8
Source record formats.....	PROG D-1
Source Work Area.....	TERM 5-1,5-2,5-64
SP Command.....	TERM 3-85,3-109
Space Down a Number of Lines in Edit File.....	TERM 5-28
Space Forward One Record on Magnetic Tape.....	TERM 3-41
Spare a Track (SP).....	UTIL 3-9
Spare Cartridge Pool.....	TERM 2-1,3-16,3-32,6-56
Spare cartridge pool.....	PROG 3-9
Spare Cartridge Pool. SMGR 2-9,2-10,2-12,2-18,2-19,6-9,7-3,7-31	
Spare disc pool.....	PROG 1-17
Spare Logical Units.....	SMGR 3-37
Spare LU Assignment.....	SMGR 3-37
Special Considerations for Dedicated Discs.....	SMGR 2-18
Special Keys.....	GTAQ 1-2
Special purpose FMP calls.....	PROG 3-69
Special Register Display.....	DEBUG 3-6
Special Register Modification And Examination.....	DEBUG 3-6
Special Registers.....	DEBUG C-7
Special Utility Loading Considerations.....	SMGR 3-114
SPLCON Format.....	BHSP C-3
SPLCON.....	BHSP 2-4,2-17,5-3
Spool Call Example.....	BHSP 3-17
Spool Control - Programmatic.....	BHSP 3-2
Spool Control Functions.....	BHSP 3-9
Spool Control-Operator.....	BHSP 4-1
Spool Control.....	BHSP 3-2,3-8
Spool Devices.....	SMGR 3-35,3-99
Spool Equipment Table.....	BHSP 2-4
Spool Errors.....	BHSP B-5
Spool File Assignment.....	TERM 3-103
Spool File Attributes.....	BHSP 2-16
Spool File Format.....	BHSP 2-3
Spool File Manipulation.....	BHSP 4-10
Spool File State Diagram.....	BHSP 4-17
Spool File.....	TERM 3-20,3-99,6-2
Spool Files.....	BHSP 2-3,2-12
Spool I/O Abort Errors.....	BHSP B-5
Spool I/O Configuration.....	SMGR 3-98
Spool Logical Unit Number.....	TERM 3-20,3-102
Spool Logical Unit.....	BHSP 3-3
Spool Monitor Programs.....	SMGR 3-97
Spool Monitor.....	TERM 1-4
Spool Pool Files.....	BHSP 2-11,2-3
Spool Position.....	BHSP 3-2

RTE-IVB INDEX

Spool Positioning..... BHSP 3-14
 Spool Setup..... BHSP 2-4,3-3
 Spool System Components..... BHSP 1-2
 Spool System Initialization..... SMGR 5-26,5-27,6-17
 Spool System Manipulation..... BHSP 4-19b
 Spooling System Components..... SMGR 3-96
 Spooling System Configuration..... SMGR 3-96,3-97,2-99,3-100
 Spooling system..... PROG 1-20
 Spooling System..... SMGR 3-95
 Spooling..... BHSP 1-3
 SPOUT..... BHSP 1-2,2-17,2-24
 SPOUT..... SMGR 3-96,3-97,3-98
 SS Command..... TERM 4-32,4-53
 SSGA (see Subsystem Global Area)
 SSGA..... PROG 1-10
 SST (see Session Switch Table)
 SST Spares..... SMGR 6-20,7-18
 ST Command (FMGR)..... TERM 3-111
 ST Command (System)..... TERM 4-54
 Stack, Command..... TERM 3-130
 Standard Format..... BHSP 2-3
 Standard I/O EXEC calls..... PROG 2-10
 Standard I/O request flow..... PROG C-14
 Standard mapping segment..... PROG 5-11
 Starting the Off-Line Utility..... UTIL 4-14
 Station Configuration Independence..... TERM 2-2
 Status EXEC calls..... PROG 2-43
 Status of all Partitions..... TERM 4-66
 Status of Partition..... TERM 4-54
 Status of Program..... TERM 4-54
 Status of Scheduled and Suspended Programs..... TERM 4-66
 String passage - EXEC 14..... PROG 2-28
 String Passage EXEC Call..... TERM 4-33,4-43,4-51
 SU - Start Up Spooling..... BHSP 4-21
 Subchannel Initialization..... SMGR 4-15
 subchannel number..... OGEN 2-61,3-7
 Subdividing EMA..... PROG 5-3
 Subfile Marks..... TERM 6-51
 Subfiles..... TERM 3-114
 subpartition mode..... OGEN 2-83
 SUBPARTITIONS?..... OGEN 2-83
 Subroutines on Firmware..... SMGR 3-79
 Subsystem global area..... PROG 1-10
 Subsystem Global Area (SSGA)..... OGEN 2-38,2-64,B-4
 Support Engineer Account..... SMGR 7-6
 Suspend EXEC Call..... TERM 4-32
 Suspended Program..... TERM 4-32
 SV Command..... TERM 3-118,3-126,E-2
 swap delay value..... OGEN 2-20
 swap delay..... OGEN 3-8
 SWAP DELAY?..... OGEN 2-20,3-8
 swap time..... OGEN 2-20
 swapping time..... OGEN 2-17
 SWTCH Error Conditions..... SMGR 4-24

SWTCH Loading Instructions..... SMGR 4-5
 SWTCH Operating Instructions..... SMGR 4-6
 SWTCH Options..... SMGR 4-4
 SWTCH Program..... SMGR 4-1
 SWTCH..... OGEN 1-2
 SY Command..... TERM 3-120,4-15
 SYCON - message route..... PROG 6-40
 Symbol Manipulation..... DBUG C-3
 symbol table..... OGEN 2-35
 System and Break-Mode Command Error Messages..... TERM B-15
 system and program loading phase..... OGEN 2-2,2-66
 System Auxiliary Disc Cartridge (LU 3)..... TERM 3-69
 System Available Memory..... TERM 4-7
 System available memory..... PROG 1-9
 System Available Memory..... BHSP 2-11
 System Available Memory (SAM)..... OGEN 2-75,2-80,B-1
 System Backup..... SMGR 7-34
 System base page..... PROG 1-8
 system base page..... OGEN B-1
 System Bootup Halt..... SMGR 9-20
 system boundaries phase..... OGEN 2-2,2-64
 System Buffer..... SMGR 5-1
 System cartridge..... PROG 3-9
 System cartridges (global)..... PROG 1-17
 System cartridges (LU2 and LU3)..... PROG 1-17
 System Cartridges..... TERM 2-8,3-15
 System Cartridges..... SMGR 2-9,2-11,2-16,2-17
 System class I/O considerations..... PROG 2-65
 system class table..... OGEN 2-69
 System Commands..... GTAQ 1-8
 System Common..... TERM 6-9,6-11
 System communication area..... PROG B-1
 system communication area..... OGEN B-1
 System Console as Session Terminal..... SMGR 8-4
 System Console Operation..... TERM 2-9
 System Console..... SMGR 7-28,8-4,8-5
 system description..... OGEN 1-3
 System Disc Cartridge (LU 2)..... TERM 3-69
 SYSTEM DISC MODEL?..... OGEN 2-14,3-6
 system disc subchannel..... OGEN 2-16,3-7
 System Disc Tracks..... TERM 6-69
 system disc..... OGEN 3-6
 System driver area (SDA)..... PROG C-8
 System Driver Area (SDA),.... OGEN 2-17,2-18,2-51,2-59,2-64,B-4
 System driver area..... PROG 1-8
 System Generation Overview..... SMGR 3-1
 System Global Cartridges..... TERM 2-8,3-15
 System global cartridges..... PROG 3-9
 System Initialization..... SMGR 5-1
 System Initialization Overview..... SMGR 1-7
 System Installation Overview..... SMGR 1-6
 System library..... PROG 1-20
 system loading phase..... OGEN 2-2,2-66
 System Logical Unit Number..... TERM 3-18,3-97,4-38,4-52

RTE-IVB INDEX

System Lu's..... PROG 1-15
 System Management Overview..... SMGR 1-2,1-3
 System Manager Account..... SMGR 2-3,2-10,2-11,6-10,7-6
 System Manager..... BHSP 5-1
 System map..... PROG 1-5
 system map..... OGEN B-7
 System Message File..... TERM 2-4
 System Message Files..... SMGR 6-7,7-31
 System Parameters Adjustment..... SMGR 8-1
 System Planning Overview..... SMGR 1-5
 System Prompt..... TERM 4-16
 System Requirements..... UTIL 6-1
 system resource table \$RNTB..... OGEN 2-70
 System Scratch Tracks..... SMGR 1-11,5-4
 system size..... OGEN 2-24
 System Slice Quantum..... TERM 4-46
 System Status Program..... TERM 3-125,6-43
 System Status Program Gen. Desc. TERM 1-6
 System Status Program, WHZAT Output..... TERM 6-47,6-48
 System status program (WHZAT)..... PROG 1-22
 System Subchannel Size..... SMGR 3-4
 System Subchannels Definition..... SMGR 4-10
 System Subchannels..... SMGR 2-16,3-3,3-4,3-11,3-16,3-20,
 3-27,3-37,3-38,5-4,5-5,5-6,5-7
 SYSTEM SUBCHNL?..... OGEN 2-16,3-7
 System Tests..... SMGR 5-8
 System Track Usage..... SMGR 3-3
 System Trade Allocation..... SMGR 5-4
 System Utilities and Libraries %BMLIB/%CLIB/\$MLIB1/\$MLIB2/
 \$MLIB3/\$FNLB/%4SYLB..... SMGR 3-103,3-104
 System utility programs..... PROG 1-21
 System WELCOM File..... TERM 3-50
 System..... PROG 1-8
 SZ Command..... TERM 4-56

T

T Command..... TERM 5-15
 T5IDM..... SMGR 3-107,5-11,5-12,5-14,5-20,5-29
 Tab Character..... TERM 5-53,5-56,5-57,5-64,5-66,5-69,
 5-71,5-74,5-77,5-80
 Tab Control Character..... TERM 5-15
 Tab Control in a Multipoint Environment..... TERM 5-90
 Table area I and II entry points..... PROG B-11
 Table area I..... PROG 1-8
 Table Area I..... OGEN 2-15,B-1
 Table area II..... PROG 1-9
 Table Area II..... OGEN 2-17,2-38,B-4
 table generation phase..... OGEN 2-2,2-51
 Talking to the System..... GTAQ 1-1
 Tape Verification..... DBUG 4-2
 TBG (see Time Base Generator)

TBG SELECT CODE?..... OGEN 2-17,3-8
 TDB (see Temporary Data Block)
 TE Command..... TERM 3-121,4-14,4-59
 Temporary Data Block..... TERM 4-7
 Temporary data buffer (TDB)..... PROG 6-2
 Temporary Program Load..... TERM 6-10
 temporary program..... OGEN 2-71
 Terminal Configuration..... SMGR 3-57
 Terminal Driver DVR05/DVA05 Modules..... SMGR 3-57
 Terminal Initialization..... SMGR 5-22
 Terminate a Program..... TERM 3-80,4-40
 Terminate Session..... TERM 3-62
 Terminating SAFD..... UTIL 6-6
 Terms..... DEBUG 1-3
 The Mark \Q..... DEBUG A-2
 The Search Mask..... DEBUG 5-1
 The Terminal..... GTAQ 1-1
 TI Command..... TERM 4-60
 TI, RE and RQ errors..... PROG 2-69
 Time Base Generator (TBG)..... OGEN 3-8
 Time Base Generator..... TERM 4-62
 Time Interval..... TERM 4-54
 Time List, Access Restrictions..... TERM 4-12
 Time List..... TERM 4-12,4-36,4-50,4-54
 Time quantum..... PROG 1-3
 Time request - EXEC 11..... PROG 2-43
 Time Request EXEC Call..... TERM 4-60
 Time Slicing..... SMGR 8-3
 time-out interval..... OGEN 2-51
 Time-Out..... TERM 3-63
 Time-slicing boundary..... PROG 1-3
 Timeouts..... SMGR 3-55,3-60
 Timeslice Quantum..... TERM 4-46
 Timeslice word..... PROG B-7
 Timeslicing Fence..... TERM 4-46
 Timeslicing Quantum..... TERM 4-46
 Timeslicing..... TERM 1-2
 TL Command..... BHSP 2-28
 TM Command..... TERM 4-61
 TMVAL - current time reformat..... PROG 6-29
 TO Command..... TERM 4-62,4-64
 TR Command..... TERM 3-122,3-127
 TR command..... OGEN 1-2,2-3
 Tracing using DEBUGR..... TERM 6-40
 Track Assignment Table..... TERM 6-67
 Track Assignment Table Log Program..... TERM 1-7,6-67
 Track assignment table (TAT)..... PROG 2-17
 Track assignment table log program (LGTAT)..... PROG 1-23
 track map table, \$TA32..... OGEN 2-15
 track map table, \$TB31..... OGEN 2-14
 track map table, \$TB32..... OGEN 2-15
 Track Map Table..... SMGR 3-74,3-76
 Track Sparing..... SMGR 3-11,3-16,3-20,3-27
 Track..... TERM 3-2

RTE-IVB INDEX

Transfer Control..... TERM 3-122
 Transfer Data and to a Created File..... TERM 3-111
 Transfer Data to Existing File..... TERM 3-58
 transfer nesting level..... OGEN 2-3
 Transfer Stack..... TERM 3-122
 TRMLU - terminal LU query..... PROG 6-31
 Truncate Characters at End of Pending Line..... TERM 5-50
 TV Interface..... SMGR 3-60
 Type 0 disc file directory entry..... PROG H-7
 Type 0 File Directory Entry..... TERM C-24
 Type 0 files..... PROG 3-3
 type 1 file..... OGEN 2-14
 Type 1 files..... PROG 3-3
 Type 2 files..... PROG 3-3
 Type 3 files..... PROG 3-3
 Type 4 files..... PROG 3-4
 Type 5 files..... PROG 3-4
 Type 6 File Format..... TERM C-18
 type 6 file..... OGEN 2-16,2-71
 Type 6 files..... PROG 3-4
 Type 6 Files..... SMGR 3-105,3-112,5-11,5-20,5-29
 Type 7 files..... PROG 3-4

U

U Command..... TERM 5-78
 Unbuffered I/O..... TERM 4-7
 Unconditional Character Replace, with List..... TERM 5-75
 Unconditional Character Replace, without List..... TERM 5-78
 Undefined Externals..... TERM 6-22
 undefined externals..... OGEN 3-9
 Unexpected DM and MP errors..... PROG 2-68
 Unnumbered Error Messages..... BHSP B-3
 unresolved external references..... OGEN 2-35
 UP - UP downed outspool devices..... BHSP 4-2,4-3,4-10,4-19a
 Up a Downed Device..... TERM 4-64
 UP Command..... TERM 4-28,4-64
 Update OPEN..... PROG 3-37
 UR Command..... TERM 4-65
 USAVE..... UTIL 2-8
 User Account Definition..... SMGR 6-15
 User Account Entries..... SMGR 7-4
 User Accounts..... SMGR 2-3,2-6,6-6,6-15,7-4,7-5,7-17/19,21
 User Buffer..... TERM 3-3
 User Cartridge Requirements..... SMGR 2-17
 User Cartridges..... SMGR 2-17
 User HELLO Files..... TERM 2-2
 User ID Map..... SMGR 7-4
 User Identification..... TERM 2-3
 User map..... PROG 1-5
 User Message File..... TERM 2-2,3-79,3-107
 User Parameter..... BHSP 2-27

User Password..... TERM 2-3
 User Questionnaire..... SMGR 1-8,6-2
 Using DBUGR To Do Simple Arithmetic..... DBUG A-2
 Using Files..... GTAQ 2-1
 Using FORMT..... UTIL 3-3
 Using Procedure Files..... GTAQ 4-1
 Using SAFD..... UTIL 6-2
 Utility and Subsystem Transfer Files..... SMGR 5-12
 Utility Buffer Space..... SMGR 3-110
 Utility File Names..... SMGR 3-107,3-108,3-109
 Utility Installation Procedure..... SMGR 5-10
 Utility Programs Types..... UTIL B-1
 Utility Relocatable File Names..... SMGR 3-109
 Utility subroutine structure..... PROG 6-4

V-W

V Command..... TERM 5-75
 Variable Length Record Files..... TERM 3-7
 Variable length record format..... PROG D-9
 VIS Configuration..... SMGR 3-91,3-92
 VIS Interface Module..... SMGR 3-91
 W Command..... TERM 5-17
 WELCOM File..... SMGR 5-7,5-18,5-20,5-22
 WH Command..... TERM 3-125,4-14,4-39,4-66
 Where files are stored..... GTAQ 2-2
 WHZAT (see System Status Program)
 Worksheet Conventions..... SMGR 3-42
 WRITF and EWRT calls..... PROG 3-52
 Writing a Source Program..... GTAQ 3-2
 WRITT (see Disc Cartridge Save/Restore Utilities)

X-Y-Z

X Command (Change EDITR Prompt)..... TERM 5-13
 X Command (Exchange Pattern)..... TERM 5-70
 X-Register Contents..... TERM 6-7
 X-Register..... TERM 6-36
 XE Command..... BHSP 2-34
 Y Command..... TERM 5-67
 Y-Register Contents..... TERM 6-7
 Y-Register..... TERM 6-36
 Z Command..... TERM 5-72
 Z-bit..... PROG 2-11
 Zero Length Record..... TERM 3-115,5-51,6-49

READER COMMENT SHEET

INDEX TO HP 92068A RTE-IVB
Operating System Manuals

92068-90017

July 1981

Update No. _____
(If Applicable)

We welcome your evaluation of this manual. Your comments and suggestions help us improve our publications. Please use additional pages if necessary.

FROM:

Name _____

 
Company _____

Address _____

Phone No. _____ Ext. _____

FOLD

FOLD



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 141 CUPERTINO, CA.

— POSTAGE WILL BE PAID BY —

Hewlett-Packard Company
Data Systems Division
11000 Wolfe Road
Cupertino, California 95014
ATTN: Technical Marketing Dept.



FOLD

FOLD

SALES & SUPPORT OFFICES

Arranged alphabetically by country

1



Product Line Sales/Support Key

Key Product Line

- A Analytical
- CM Components
- C Computer Systems Sales only
- CH Computer Systems Hardware Sales and Services
- CS Computer Systems Software Sales and Services
- E Electronic Instruments & Measurement Systems
- M Medical Products
- MP Medical Products Primary SRO
- MS Medical Products Secondary SRO
- P Personal Computation Products
- * Sales only for specific product line
- ** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Rd.
G.P.O. Box 795
HONG KONG
Tel: 5-832 3211
After Jan. 1, 1984
47th Floor, China Resources Bldg.
26 Harbour Rd., Wanchai
HONG KONG
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Lieblgasse 1
P.O. Box 72
A-1222 VIENNA, Austria
Tel: (222) 2365 110
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
P.O. Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 20 437771

SOUTH EAST EUROPE

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

OTHER EUROPE

Hewlett-Packard S.A.
P.O. Box
150, Rue du Nant-O'Avril
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 8111
Telex: 22486 hpsa
Cable: HEWPACKSA Geneve

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Ave.
Paradissos-Amarousion, ATHENS
Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MO 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankershim Blvd.
P.O. Box 3919
LOS ANGELES, CA 91604
Tel: (213) 506-3700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Oer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

ANGOLA

Telectra
Empresa Técnica de Equipamentos
R. Barbosa Rodrigues, 41-I DT.
Caixa Postal 6487
LUANDA
Tel: 35515,35516
E,P

ARGENTINA

Hewlett-Packard Argentina S.A.
Avenida Santa Fe 2035
Martinez 1640 BUENOS AIRES
Tel: 798-5735, 792-1293
Telex: 17595 BIONAR
Cable: HEWPACKARG
A,E,CH,CS,P
Biotron S.A.C.I.M. e I.
Av Paseo Colon 221, Piso 9
1399 BUENOS AIRES
Tel: 30-4846, 30-1851
Telex: 17595 BIONAR
M

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
153 Greenhill Road
PARKSIDE, S.A. 5063
Tel: 272-5911
Telex: 82536
Cable: HEWPAKD Adelaide
A*,CH,CM,,E,MS,P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 30-4133
Telex: 42133
Cable: HEWPAKO Brisbane
A,CH,CM,E,M,P

Canberra, Australia

Capital Territory Office
Hewlett-Packard Australia Ltd.
121 Wollongong Street
Fyshwick, A.C.T. 2609
Tel: 80 4244
Telex: 62650
Cable: HEWPAKO Canberra
CH,CM,E,P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
BLACKBURN, Victoria 3130
Tel: 895-2895
Telex: 31-024
Cable: HEWPAKO Melbourne
A,CH,CM,CS,E,MS,P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
261 Stirling Highway
CLAREMONT, W.A. 6010
Tel: 383-2188
Telex: 93859
Cable: HEWPAKO Perth
A,CH,CM,E,MS,P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Tel: 887-1611
Telex: 21561
Cable: HEWPAKO Sydney
A,CH,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
Grottenhofstrasse 94
A-8052 GRAZ
Tel: (0316) 291 5 66
Telex: 32375
CH,E
Hewlett-Packard Ges.m.b.h.
Lieblgasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (0222) 23 65 11-0
Telex: 134425 HEPA A
A,CH,CM,CS,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
Manama
BAHRAIN
Tel: 255503-255950
Telex: 844 19
P
Wael Pharmacy
P.O. Box 648
BAHRAIN
Tel: 256123
Telex: 8550 WAEI BN
E,C,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedel
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 BARUERI SP
Tel: (011) 421.1311
Telex: (011) 33872 HPBR-BR
Cable: HEWPACK Sao Paulo
A,CH,CM,CS,E,M,P
Hewlett-Packard do Brasil I.e.C. Ltda.
Avenida Epitacio Pessoa, 4664
22471 RIO DE JANEIRO-RJ
Tel: (021) 286.0237
Telex: 021-21905 HPBR-BR
Cable: HEWPACK Rio de Janeiro
A,CH,CM,E,MS,P*
ANAMED I.C.E.I. Ltda.
Rua Bage, 103
04012 SAO PAULO
Tel: (011) 570-5726
Telex: 021-21905 HPBR-BR
M



SALES & SUPPORT OFFICES

Arranged alphabetically by country

CANADA

Alberta

Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (403) 235-3100
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
11120A-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (403) 486-6666
A,CH,CM,CS,E,MS,P

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W7
Tel: (604) 270-2277
Telex: 610-922-5059
A,CH,CM,CS,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
380-550 Century Street
WINNIPEG, Manitoba R3H 0Y1
Tel: (204) 786-6701
A,CH,CM,E,MS,P*

Nova Scotia

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
900 Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 469-7820
CH,CM,CS,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
3325 N. Service Rd., Unit 6
BURLINGTON, Ontario P3A 2A3
Tel: (416) 335-8644
CS,M*

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
A,CH,CM,CS,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
220 Yorkland Blvd., Unit #11
WILLOWDALE, Ontario M2J 1R5
Tel: (416) 499-9333
CH

Quebec

Hewlett-Packard (Canada) Ltd.
17500 South Service Road
Trans-Canada Highway
KIRKLAND, Quebec H9J 2M5
Tel: (514) 697-4232
A,CH,CM,CS,E,MP,P*

Hewlett-Packard (Canada) Ltd.
Les Galeries du Vallon
2323 Du Versant Nord
STE. FOY, Quebec G1N 4C2
Tel: (418) 687-4570
CH

CHILE

Jorge Calcagni y Cia. Ltda.
Av. Italia 634 Santiago
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: Public Booth 440001
A,CM,E,M

Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: (02) 22 55 044
Telex: 240-565 OLYMP CL
Cable: Olympiachile Santiagochile
CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Rep. Office
P.O. Box 418
1A Lane 2, Luchang St.
Beiwei Rd., Xuanwu District
BEIJING

Tel: 33-1947, 33-7426
Telex: 22601 CTSHP CN
Cable: 1920
A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

Casa Humboldt Ltda.
Carrera 14, No. 98-60
Apartado Aereo 51283
BOGOTA 1, D.E.
Tel: 256-1686
Telex: 45403 CCAL CO.
A

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS

Telerexa Ltd.
P.O. Box 4809
14C Stassinios Avenue
NICOSIA
Tel: 62698
Telex: 2894 LEVIDO CY
E,M,P

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 BIRKEROD
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,CH,CM,CS,E,MS,P
Hewlett-Packard A/S
Røllighedsvej 32
DK-8240 RISSKOV, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpas dk
CH,E

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA) P
A,CM,E,M

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
CM,E,P

Hospitalar S.A.

Robles 625
Casilla 3590
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTL ED
Cable: HOSPITALAR-Quito
M

EGYPT

International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
CAIRO
Tel: 23829, 21641
Telex: IEA UN 93830
CH,CS,E,M

EGYPTOR

P.O.Box 2558
42 El Zahraa Street
CAIRO, Egypt
Tel: 65 00 21
Telex: 93 337
P

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1216
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 IPESASAL
A,CH,CM,CS,E,P

FINLAND

Hewlett-Packard Oy
Revontulentie 7
PL 24
SF-02101 ESP00 10
Tel: (90) 4550211
Telex: 121563 hewpa sf
CH,CM,CS,P
Hewlett-Packard Oy
(Olarinluoma 7)
PL 24
02101 ESP00 10
Tel: (90) 4521022
A,E,MS

Hewlett-Packard Oy
Aaloksenkatu 10-C
SF-40720-72 JYVASKYLA
Tel: (941) 216318
CH

Hewlett-Packard Oy
Kainvuntie 1-C
SF-90140-14 OULU
Tel: (981) 338785
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 16 (42) 59-41-02
Telex: 410770F
A,CH,E,MS,P*

Hewlett-Packard France
64, rue Marchand Saillant
F-61000 ALENCON
Tel: 16 (33) 29 04 42

Hewlett-Packard France
Boite Postale 503
F-25026 BESANCON
28 rue de la Republique
F-25000 BESANCON
Tel: 16 (81) 83-16-22
CH,M

Hewlett-Packard France
13, Place Napoleon III
F-29000 BREST
Tel: 16 (98) 03-38-35

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
F-69130 ECULLY Cedex (Lyon)
Tel: 16 (78) 833-81-25
Telex: 310617F
A,CH,CS,E,MP

Hewlett-Packard France
Tour Lorraine
Boulevard de France
F-91035 EVRY Cedex
Tel: 16 6 077-96-60
Telex: 692315F
E

Hewlett-Packard France
Parc d'Activite du Bois Briard
Ave. du Lac
F-91040 EVRY Cedex
Tel: 16 6 077-8383
Telex: 692315F
E

Hewlett-Packard France
5, avenue Raymond Chanas
F-38320 EYBENS (Grenoble)
Tel: 16 (76) 25-81-41
Telex: 980124 HP GREN0B EYBE
CH

Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 300
F-93153 LE BLANC MESNIL
Tel: 16 (1) 865-44-52
Telex: 211032F
CH,CS,E,MS

Hewlett-Packard France
Parc d'Activités Cadera
Quartier Jean Mermoz
Avenue du Président JF Kennedy
F-33700 MERIGNAC (Bordeaux)
Tel: 16 (56) 34-00-84
Telex: 550105F
CH,E,MS

Hewlett-Packard France
Immueble "Les 3 B"
Nouveau Chemin de la Garde
ZAC de Bois Briard
F-44085 NANTES Cedex
Tel: 16 (40) 50-32-22
CH**



FRANCE (Cont'd)

Hewlett-Packard France
125, rue du Faubourg Bannier
F-45000 ORLEANS
Tel: 16 (38) 68 01 63

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P

Hewlett-Packard France
Paris Porte-Maillot
15, Avenue de L'Amiral Bruix
F-75782 PARIS CEDEX 16
Tel: 16 (1) 502-12-20
Telex: 613663F
CH,MS,P

Hewlett-Packard France
124, Boulevard Tourasse
F-64000 PAU
Tel: 16 (59) 80 38 02

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 RENNES
Tel: 16 (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*

Hewlett-Packard France
98 Avenue de Bretagne
F-76100 ROUEN
Tel: 16 (35) 63-57-66
CH***,CS

Hewlett-Packard France
4 Rue Thomas Mann
Boite Postale 56
F-67033 STRASBOURG Cedex
Tel: 16 (88) 28-56-46
Telex: 890141F
CH,E,MS,P*

Hewlett-Packard France
Le Péripole
20, Chemin du Pigeonnier de la Cépière
F-31083 TOULOUSE Cedex
Tel: 16 (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*

Hewlett-Packard France
9, rue Baudin
F-26000 VALENCE
Tel: 16 (75) 42 76 16

Hewlett-Packard France
Carolor
ZAC de Bois Briand
F-57640 VIGY (Metz)
Tel: 16 (8) 771 20 22
CH

Hewlett-Packard France
Immeuble Péricentre
F-59658 VILLENEUVE D'ASCQ Cedex
Tel: 16 (20) 91-41-25
Telex: 160124F
CH,E,MS,P*

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbln d
A,CH,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Herrenberger Strasse 130
D-7030 BÖBLINGEN
Tel: (7031) 14-0
Telex:

A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Leutze-Strasse 1
D-4000 DUSSELDORF
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-Aplerbeck
Tel: (0231) 45001

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpffm d
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Aussenstelle Bad Homburg
Louisenstrasse 115
D-6380 BAD HOMBURG
Tel: (06172) 109-0

Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
D-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259
A,CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Rossauer Weg 2-4
D-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 0731-70241
Telex: 0712816 HP ULM-0
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Ehhericherstr. 13
D-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860
CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

See United Kingdom

GREECE

Kostas Karayannis S.A.
8 Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,CH,CM,CS,E,M,P

PLAISIO S.A.
G. Gerardos
24 Stournara Street
ATHENS
Tel: 36-11-160
Telex: 221871
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 4192 TELTRO GU
A,CH,CM,CS,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG
E,CH,CS,P

CET Ltd.
1402 Tung Wah Mansion
199-203 Hennessy Rd.
Wanchia, HONG KONG
Tel: 5-729376
Telex: 85148 CET HX
CM

Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Elding Trading Company Inc.
Hafnarvölli-Tryggvagötu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs and
maintenance service is done through
Computer Maintenance Corp.

Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660
Telex: 0845-430
Cable: BLUESTAR
A,CH*,CM,CS*,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTBLUE
A,CH*,CM,CS*,E,M

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BORODA, 390 005
Tel: 65235
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH*,CM,CS*,E,M

Blue Star Ltd.
15/16-C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

Computer Maintenance Corporation
Ltd.
115, Sarojini Devi Road
SECUNDERABAD 500 003
Tel: 310-184, 345-774
Telex: 031-2960
CH**



SALES & SUPPORT OFFICES

Arranged alphabetically by country

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/Jkl.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA
P
BERCA Indonesia P.T.
P.O.Box 2497/Jkl
Anlara Bldg., 17th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-344-181
Telex: BERSAL IA
A,CS,E,M

BERCA Indonesia P.T.
P.O. Box 174/SBY.
Jl. Kulei No. 11
SURABAYA
Tel: 68172
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPARAIQ IK
CH,CS

IRELAND

Hewlett-Packard Ireland Ltd.
82/83 Lower Leeson Street
DUBLIN 2
Tel: 0001 608800
Telex: 30439
A,CH,CM,CS,E,M,P
Cardiac Services Ltd.
Kilmore Road
Arlane
DUBLIN 5
Tel: (01) 351820
Telex: 30439
M

ISRAEL

Eidan Electronic Instrument Ltd.
P.O.Box 1270
JERUSALEM 91000
16, Ohaliav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL
A
Electronics Engineering Division
Motorola Israel Ltd.
16 Kremenelski Street
P.O. Box 25D16
TEL-AVIV 67899
Tel: 3 88 388
Telex: 33569 Molil IL
Cable: BASTEL Tel-Aviv
CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A.
Traversa 99C
Via Giulio Petroni, 19
I-70124 **BARI**
Tel: (080) 41-07-44
M

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/III
I-40132 **BOLOGNA**
Tel: (051) 402394
Telex: 511630
CH,E,MS

Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95126 **CATANIA**
Tel: (095) 37-10-87
Telex: 970291
C,P

Hewlett-Packard Italiana S.p.A.
Via G. Oi Vittorio 9
I-20063 **CERNUSCO SUL NAVIGLIO**
(Milano)
Tel: (02) 923691
Telex: 334632
A,CH,CM,CS,E,MP,P
Hewlett-Packard Italiana S.p.A.
Via C. Colombo 49
I-20090 **TREZZANO SUL NAVIGLIO**
(Milano)
Tel: (02) 4459041
Telex: 322116
C,M

Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco a
Capodimonte, 62/A
I-80131 **NAPOLI**
Tel: (081) 7413544
Telex: 710698
A,CH,E

Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 **GENOVA PEGLI**
Tel: (010) 68-37-07
Telex: 215238
E,C

Hewlett-Packard Italiana S.p.A.
Via Pelizzo 15
I-35128 **PADOVA**
Tel: (049) 664888
Telex: 430315
A,CH,E,MS

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 **ROMA EUR**
Tel: (06) 54831
Telex: 610514
A,CH,CM,CS,E,MS,P*

Hewlett-Packard Italiana S.p.A.
Via di Casellina 57/C
I-50018 **SCANDICCI-FIRENZE**
Tel: (055) 753863

Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 185
I-10144 **TORINO**
Tel: (011) 74 4044
Telex: 221079
CH,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (0462) 28-0451
CM,C*,E

Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei Bldg. 6F
3-1 Hon Chiba-Cho
CHIBA, 280
Tel: 472 25 7701
E,CH,CS

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: 82-241-0611

Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Oaiichi Seimei Bldg.
4-7, Hanabata-cho
KUMAMOTO, 860
Tel: (0963) 54-7311
CH,E

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614, Higashi-Shiokoji-cho
Karasuma-Nishiiru
Shiokoji-dori, Shimogyo-ku
KYOTO, 600
Tel: 075-343-0921
CH,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg
4-73, Sanno-maru, 1 Chome
MITO, Ibaraki 310
Tel: (0292) 25-7470
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei 14-9 Bldg.
Meiki-Minami, 2 Chome
Nakamura-ku
NAGOYA, 450
Tel: (052) 571-5171
CH,CM,CS,E,MS

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
27-15, Yabe, 1 Chome
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.
Oaiichi Seimei Bldg.
7-1, Nishi Shinjuku, 2 Chome
Shinjuku-ku, **TOKYO** 160
Tel: 03-348-4611
CH,E

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku **TOKYO** 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
Oaiichi Asano Building
2-8, Odori, 5 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 25-7155
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
YOKOHAMA 221
Tel: (045) 312-1252
CH,CM,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
CH,E,M,P

KENYA

ADCOM Ltd., Inc., Kenya
P.O.Box 30070
NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Electronics HP Division
12 Fl. Kinam Bldg.
San 75-31, Yeoksam-Dong
Kangnam-Ku
Yeongdong P.O. Box 72
SEOUL
Tel: 555-7555, 555-5447
Telex: K27364 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830 Safal
KUWAIT
Tel: 42-4910, 41-1726
Telex: 22481 Areeg kl
CH,E,M
Photo & Cine Equipment
P.O. Box 270 Safal
KUWAIT
Tel: 42-2846, 42-3801
Telex: 22247 Matin kl
P

LEBANON

G.M. Dolmadjian
Achrafieh
P.O. Box 165.167
BEIRUT
Tel: 29D293
MP**
Computer Information Systems
P.O. Box 11-6274
BEIRUT
Tel: 89 40 73
Telex: 22259
C

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedel
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan British
American
Jalan Semantan, Oamansara Heights
KUALA LUMPUR 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*



MAYLAISIA (Cont'd)

Protel Engineering
P.O.Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROMAL
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd.
Notabile Rd.
MRIEHEL
Tel: 447 47, 455 66
Telex: Media MW 649
E,P

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
16020 MEXICO D.F.
Tel: 6-76-46-00
Telex: 17-74-507 HEWPACK MEX
A,CH,CS,E,MS,P
Hewlett-Packard Mexicana, S.A.
de C.V.
Ave. Colonia del Valle 409
Col. del Valle
Municipio de Garza Garcia
MONTERREY, Nuevo Leon
Tel: 78 42 41
Telex: 038 410
CH
ECISA
José Vasconcelos No. 218
Col. Condesa Oeleg. Cuauhtémoc
MEXICO D.F. 06140
Tel: 553-1206
Telex: 17-72755 ECE ME
M

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E

Gerep

2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KK AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 47-20-21
Telex: 13 216 HEPAC NL
A,CH,CM,CS,E,MP,P
Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK CAPELLE A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE A/D IJSSEL
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A,CH,CS,E

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
NL 5612 LV EINDHOVEN
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: (040) 326911
Telex: 51484 hepae nl
A,CH* *E,M

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPACK Auckland
CH,CM,E,P*

Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 9443
Courtenay Place, WELLINGTON 3
Tel: 877-199
Cable: HEWPACK Wellington
CH,CM,E,P

Northrop Instruments & Systems Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-928
Telex: 4203
A,M

Northrop Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 FYLLINGSDALEN (Bergen)
Tel: 0047/5/16 55 40
Telex: 16621 hpnas n
CH,CS,E,MS

Hewlett-Packard Norge A/S
Österndalen 16-18
P.O. Box 34
N-1345 ÖSTERÅS
Tel: 0047/2/17 11 80
Telex: 16621 hpnas n
A,CH,CM,CS,E,M,P

OMAN

Khimji Ramdas
P.O. Box 19
MUSCAT
Tel: 722225, 745601
Telex: 3289 BROKER MB MUSCAT
P
Suhail & Saud Bahwan
P.O.Box 169
MUSCAT
Tel: 734 201-3
Telex: 3274 BAHWAN MB

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 51071
Cable: FEMUS Rawalpindi
A,E,M
Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P*

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 63-6613, 63-6748
Telex: 3483 ELECTRON PG
A,CM,E,M,P

PERU

Cía Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
CM,E,M,P

PHILIPPINES

The Online Advanced Systems
Corporation
Rico House, Amorsolo Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,CH,CS,E,M
Electronic Specialists and Proponents
Inc.
690-B Epifanio de los Santos Avenue
Cubao, QUEZON CITY
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY BOOTH
P

PORTUGAL

Mundinter
Intercambio Mundial de Comércio
S.A.R.L.
P.O. Box 2761
Av. Antonio Augusto de Aguiar 138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M
Soquímica
Av. da Liberdade, 220-2
1298 LISBOA Codex
Tel: 56 21 81/2/3
Telex: 13316 SABASA
P
Telectra-Empresa Técnica de
Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P

PUERTO RICO

Hewlett-Packard Puerto Rico
Ave. Muñoz Rivera #101
Esq. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800
Hewlett-Packard Puerto Rico
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00628
Tel: (809) 762-7255
A,CH,CS

QATAR

Computeabia
P.O. Box 2750
DOHA
Tel: 883555
Telex: 4806 CHPARB
P
Eastern Technical Services
P.O.Box 4747
DOHA
Tel: 329 993
Telex: 4156 EASTEC OH
Nasser Trading & Contracting
P.O.Box 1563
DOHA
Tel: 22170, 23539
Telex: 4439 NASSER OH
M

SAUDI ARABIA

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 22015
Thuobah
AL-KHOBAR
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 38 48
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDOAH
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O.Box 22015
RIYADH
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYO SJ
CH,CS,E,M
Abdul Ghani El Ajou
P.O. Box 78
RIYADH
Tel: 40 41 717
Telex: 200 932 EL AJOU
P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
#08-00 Inchcape House
450-2 Alexandra Road
P.O. Box 58 Alexandra Rd. Post Office
SINGAPORE, 9115
Tel: 631788
Telex: HPSGSO RS 34209
Cable: HEWPACK, Singapore
A,CH,CS,E,MS,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

SINGAPORE (Cont'd)

Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS 26283
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 120
Howard Place **CAPE PROVINCE 7450**
Pine Park Center, Forest Drive,
Pinelands
CAPE PROVINCE 7405
Tel: 53-7954
Telex: 57-20006
A,CH,CM,E,MS,P
Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 37099
92 Overport Drive
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
Telex: 6-22954
CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.
6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6000
Tel: 041-302148
CH

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 33345
Glenstantia 0010 **TRANSVAAL**
1st Floor East
Constantia Park Ridge Shopping
Centre
Constantia Park
PRETORIA
Tel: 982043
Telex: 32163
CH,E

Hewlett-Packard So Africa (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.
Calle Entenza, 321
E-BARCELONA 29
Tel: 322.24.51, 321.73.54
Telex: 52603 hpbee
A,CH,CS,E,MS,P

Hewlett-Packard Española S.A.
Calle San Vicente S/No
Edificio Albia II
E-BILBAO 1
Tel: 423.83.06
A,CH,E,MS

Hewlett-Packard Española S.A.
Ctra. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
CH,CS,M

Hewlett-Packard Española S.A.
Avda. S. Francisco Javier, S/No
Planta 10. Edificio Sevilla 2,
E-SEVILLA 5
Tel: 64.44.54
Telex: 72933
A,CS,MS,P

Hewlett-Packard Española S.A.
Calle Ramon Gordillo, 1 (Entlo.3)
E-VALENCIA 10
Tel: 361-1354
CH,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnanvagen 14K
S-22226 LUND
Tel: (046) 13-69-79
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Östra Tullgatan 3
S-21128 Malmö
Tel: (040) 70270
Telex: (854) 17886 (via Spånga
office)

Hewlett-Packard Sverige AB
Västra Vintergatan 9
S-70344 ÖREBRO
Tel: (19) 10-48-80
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Skalholmsgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781
A,CH,CM,CS,E,MS,P

Hewlett-Packard Sverige AB
Frötallsgatan 30
S-42132 VÄSTRA-FRÖLUNDA
Tel: (031) 49-09-50
Telex: (854) 17886 (via Spånga
office)
CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (61) 33-59-20
A

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 2
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
CH,CM,CS

Hewlett-Packard (Schweiz) AG
Allmend 2
CH-8967 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha Ahnaf Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 411 215
Cable: ELECTROBOR DAMASCUS
E

Middle East Electronics
P.O. Box 2308
Abu Rumaneh
DAMASCUS
Tel: 33 4 5 92
Telex: 411 304
M

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Office
2/F 68-2, Chung Cheng 3rd Road
KAOSHIUNG
Tel: (07) 241-2318
CH,CS,E
Hewlett-Packard Far East Ltd.
Taiwan Branch
8th Floor
337 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P
Ing Lih Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3948191
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,CH,CS,E,M
Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-BEQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
50/A Jerningham Avenue
P.O. Box 732
PORT-OF-SPAIN
Tel: 62-44213, 62-44214
Telex: 235,272 HUGCO WG
CM,E,M,P

TUNISIA

Tunisie Electronique
31 Avenue de la Liberte
TUNIS
Tel: 280-144
E,P

Corema
1 ter. Av. de Carthage
TUNIS
Tel: 253-821
Telex: 12319 CABAM TN
M

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere, **ANKARA**
Tel: 275800
Telex: 42155 TKNM TR
E

E.M.A.
Medina Eldem Sokak No.41/6
Yüksel Caddesi
ANKARA
Tel: 175 622
Telex: 42 591
M

UNITED ARAB EMIRATES

Emilac Ltd.
P.O. Box 2711
ABU DHABI
Tel: 82 04 19-20
Cable: EMITAC ABUDHABI
Emilac Ltd.
P.O. Box 1641
SHARJAH
Tel: 591 181
Telex: 68136 Emilac Sh
CH,CS,E,M,P

UNITED KINGDOM

GREAT BRITAIN

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: 061 928 6422
Telex: 668068
A,CH,CS,E,M,MS,P
Hewlett-Packard Ltd.
Elstree House, Elstree Way
BOREHAMWOOD, Herts WD6 1SG
Tel: 01 207 5000
Telex: 8952716
E,CH,CS,P

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 0272 736806
Telex: 444302
CH,CS,E,P

Hewlett-Packard Ltd.
Bridewell House
Bridewell Place
LONDON EC4V 6BS
Tel: 01 583 6565
Telex: 298163
CH,CS,P

Hewlett-Packard Ltd.
Fourier House
257-263 High Street
LONDON COLNEY
Herts. AL2 1HA, St. Albans
Tel: 0727 24400
Telex: 1-8952716
CH,CS

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON, West Yorkshire WF6 1RN
Tel: 0924 895566
Telex: 557355
CH,CS,P

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 0737 68655
Telex: 947234
CH,CS,E,P

GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, SOLIHULL, West Midlands
890 48L
Tel: 021 745 8800
Telex: 339105
CH,CS,E,P

Hewlett-Packard Ltd.
West End House
41 High Street, West End
SOUTHAMPTON
Hampshire SO3 30Q
Tel: 04218 6767
Telex: 477138
CH,CS,P

Hewlett-Packard Ltd.
Eskdale Rd.
Winnersh, WOKINGHAM
Berkshire RG11 50Z
Tel: 0734 696622
Telex: 848884
E

Hewlett-Packard Ltd.
King Street Lane
Winnersh, WOKINGHAM
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178
A,CH,CS,E,M,MP,P
Hewlett-Packard Ltd.
Nine Mile Ride
Easthampstead, WOKINGHAM
Berkshire, 3RG11 3LL
Tel: 0344 773100
Telex: 848805
CH,CS,E,P

IRELAND

NORTHERN IRELAND

Hewlett-Packard Ltd.
Cardiac Services Building
95A Finaghy Road South
BELFAST BT10 0BY
Tel: 0232 625-566
Telex: 747626
CH,CS

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682
CH,CM,CS,E,M,P

UNITED STATES

Alabama

Hewlett-Packard Co.
700 Century Park South, Suite 128
BIRMINGHAM, AL 35226
Tel: (205) 822-6802
A,CH,M

Hewlett-Packard Co.
420 Wynn Drive
HUNTSVILLE, AL 35805
P.O. Box 7700
HUNTSVILLE, AL 35807
Tel: (205) 830-2000
CH,CM,CS,E,M*

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 889-4631
CH,E,MS**

California

Hewlett-Packard Co.
99 South Hill Dr.
BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS

Hewlett-Packard Co.
P.O. Box 7830 (93747)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
CH,CS,MS

Hewlett-Packard Co.
P.O. Box 4230
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
320 S. Kellogg, Suite 8
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
Telex: 910-325-6608
CH,CM,CS,MP

Hewlett-Packard Co.
3155 Porter Oaks Drive
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
4244 So. Market Court, Suite A
P.O. Box 15976
SACRAMENTO, CA 95852
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333
SAN DIEGO, CA 92139
Tel: (619) 279-3200
CH,CM,CS,E,MP
Hewlett-Packard Co.
2305 Camino Ramon "C"
SAN RAMON, CA 94583
Tel: (415) 838-5900
CH,CS

Hewlett-Packard Co.
3005 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0586
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91362
Tel: (213) 706-6800
E*,CH*,CS*

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
A,CH,CM,CS,E,MS

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida

Hewlett-Packard Co.
2901 N.W. 62nd Street
P.O. Box 24210
FORT LAUDERDALE, FL 33307
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
6177 Lake Ellenor Drive
P.O. Box 13910
ORLANDO, FL 32859
Tel: (305) 859-2900
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
5750B N. Hoover Blvd., Suite 123
P.O. Box 15200
TAMPA, FL 33614
Tel: (813) 884-3282
A*,CH,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hawaii

Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,MS

Illinois

Hewlett-Packard Co.
304 Eldorado Road
P.O. Box 1607
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,MS**

Hewlett-Packard Co.
1100 31st Street, Suite 100
DOWNS GROVE, IL 60515
Tel: (312) 960-5760
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,MP

Indiana

Hewlett-Packard Co.
7301 No. Shadeland Avenue
P.O. Box 50807
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa

Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
CH,MS**

Kansas

Hewlett-Packard Co.
7804 East Funston Road, #203
WICHITA, KS 67207
Tel: (316) 684-8491
CH

Kentucky

Hewlett-Packard Co.
10300 Linn Station Road, #100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,CH,CM,CS,E,MP

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A,C,CH,CS,CM,E,MP,P*
Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
CH,CS,E

Michigan

Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48084
Tel: (313) 643-6474
CH,CS

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Missouri

Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,CH,CS,E,MP



SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

Nebraska

Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
CM,MS

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
60 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico

Hewlett-Packard Co.
11300 Lomas Blvd., N.E.
P.O. Box 11634
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH,CS,E,MS

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A,CH,E,MS

Hewlett-Packard Co.
9600 Main Street
P.O. Box AC
CLARENCE, NY 14031
Tel: (716) 759-8621
CH

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
CH,CM,CS,E,MS

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor

34th Street & 8th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
CH,CS,E*,M*

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 684-6100
CM,CH,CS,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
A,CH,CM,CS,E,MS

North Carolina

Hewlett-Packard Co.
5605 Roanne Way
P.O. Box 26500
GREENSBORO, NC 27420
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
Eff: Nov. 25, 1983
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
CH,CM,CS,E*

Hewlett-Packard Co.
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS

Oklahoma

Hewlett-Packard Co.
304 N. Meridian, Suite A
P.O. Box 75609
OKLAHOMA CITY, OK 73147
Tel: (405) 946-9499
A*,CH,E*,MS

Hewlett-Packard Co.
3840 S. 103rd E. Avenue, #100
P.O. Box 35747
TULSA, OK 74153
Tel: (918) 665-3300
A**,CH,CS,M*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
P.O. Box 328
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP

Hewlett-Packard Co.
2750 Monroe Boulevard
P.O. Box 713
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A,CH,CM,E,M

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
P.O. Box 21708
COLUMBIA, SC 29221
Tel: (803) 732-0400
CH,E,MS

Hewlett-Packard Co.
Koger Executive Center
Chesterfield Bldg., Suite 124
GREENVILLE, SC 29615
Tel: (803) 297-4120

Tennessee

Hewlett-Packard Co.
224 Peters Road, Suite 102
P.O. Box 22490
KNOXVILLE, TN 37922
Tel: (615) 691-2371
A*,CH,MS

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Texas

Hewlett-Packard Co.
4171 North Mesa
Suite C-110
EL PASO, TX 79902
Tel: (915) 533-3555
CH,E*,MS**

Hewlett-Packard Co.
10535 Harwin Drive
P.O. Box 42816
HOUSTON, TX 77042
Tel: (713) 776-6400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
930 E. Campbell Rd.
P.O. Box 1270
RICHARDSON, TX 75080
Tel: (214) 231-6101
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
1020 Central Parkway South
P.O. Box 32993
SAN ANTONIO, TX 78216
Tel: (512) 494-9336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
4305 Cox Road
GLEN ALLEN, VA 23060
P.O. Box 9669
RICHMOND, VA 23228
Tel: (804) 747-7750
A,CH,CS,E,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99212
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
4604 MacCorkle Ave.
P.O. Box 4297
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e I.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CM,E,M

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3RA Transversal Los Ruices Norte
Edificio Segre 1, 2 & 3
Apartado 50933
CARACAS 1071
Tel: 239-4133
Telex: 251046 HEWPACK
A,CH,CS,E,MS,P
Hewlett-Packard de Venezuela C.A.
Calle-72-Entre 3H y 3Y, No. 3H-40
Edificio Ada-Evelyn, Local B
Apartado 2646
4001, MARACAIBO, Estado Zulia
Tel: (061) 80.304
C,E*

Hewlett-Packard de Venezuela C.A.
Calle Vargas Rondon
Edificio Seguros Carabobo, Piso 10
VALENCIA
Tel: (041) 51 385
CH,CS,P

Bioelectronica Medica C.A.
Calle Buen Pastor
Edif. Cota Mil-Piso 2 y Semi Sotano 1
Boleita Norte
Apartado 50710 CARACAS 1050A
Tel: 239 84 41
Telex: 265 18

ZIMBABWE

Field Technical Sales
45 Kelvin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,M,P

July 1983 5952-6900

Indicates main office

HP distributors are printed in italics.



HEWLETT
PACKARD